MITSUBISHI ELECTRIC

SPLIT-TYPE AIR CONDITIONERS

Changes for the Better

Revision C:
- The indoor fan speed control when the thermostat turns off in COOL or DRY operation has been deleted.

Please void OBH538 REVISED EDITION-B.

INDOOR UNIT
SERVICE MANUAL

No. OBH538
REVISED EDITION-C


Models

MSY-GE10VA - R1
MSY-GE13VA - R1
MSY-GE15VA - R1
MSY-GE18VA - R1

MSY-GE24VA - R1
MSY-GE26VA - R1

Outdoor unit service manual
MUY-GE·VA - R Series (OBH539)
MUY-GE·VA - P Series (OBH541)
MXY-A·VA Series (OB407, OB408)
MXY-E·VA Series (OBH528)

MSY-GE10VA
MSY-GE13VA
MSY-GE15VA
MSY-GE18VA

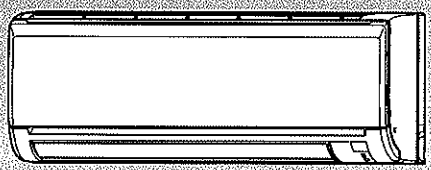

CONTENTS

1. TECHNICAL CHANGES 3
2. PART NAMES AND FUNCTIONS 4
3. SPECIFICATION 5
4. NOISE CRITERIA CURVES 6
5. OUTLINES AND DIMENSIONS 8
6. WIRING DIAGRAM 9
7. REFRIGERANT SYSTEM DIAGRAM 10
8. SERVICE FUNCTIONS 11
9. MICROPROCESSOR CONTROL 13
10. TROUBLESHOOTING 21
11. DISASSEMBLY INSTRUCTIONS 39
PARTS CATALOG (OBB538)

NOTE:
RoHS compliant products have <G> mark on the spec name plate.

starMEX

Revision A:
• MSY-GE24VA-R1 and MSY-GE26VA-R1 have been added.

Revision B:
• Detail of the indoor fan speed control in COOL or DRY operation has been added (9-1.3, 9-2.3).

Revision C:
• The indoor fan speed control when the thermostat turns off in COOL or DRY operation has been deleted.


1 TECHNICAL CHANGES

MSY-GE10VA - R1
MSY-GE13VA - R1
MSY-GE15VA - R1
MSY-GE18VA - R1
MSY-GE24VA - R1
MSY-GE26VA - R1


1. New model

2 PART NAMES AND FUNCTIONS

MSY-GE10VA MSY-GE13VA MSY-GE15VA MSY-GE18VA

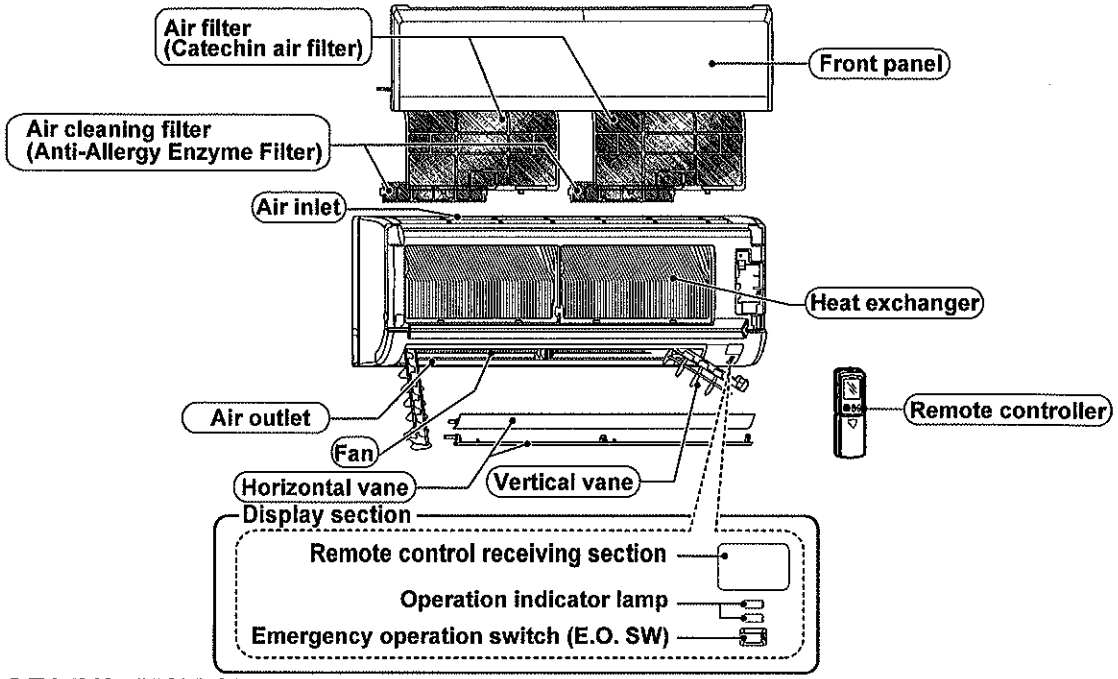

MSY-GE24VA MSY-GE26VA

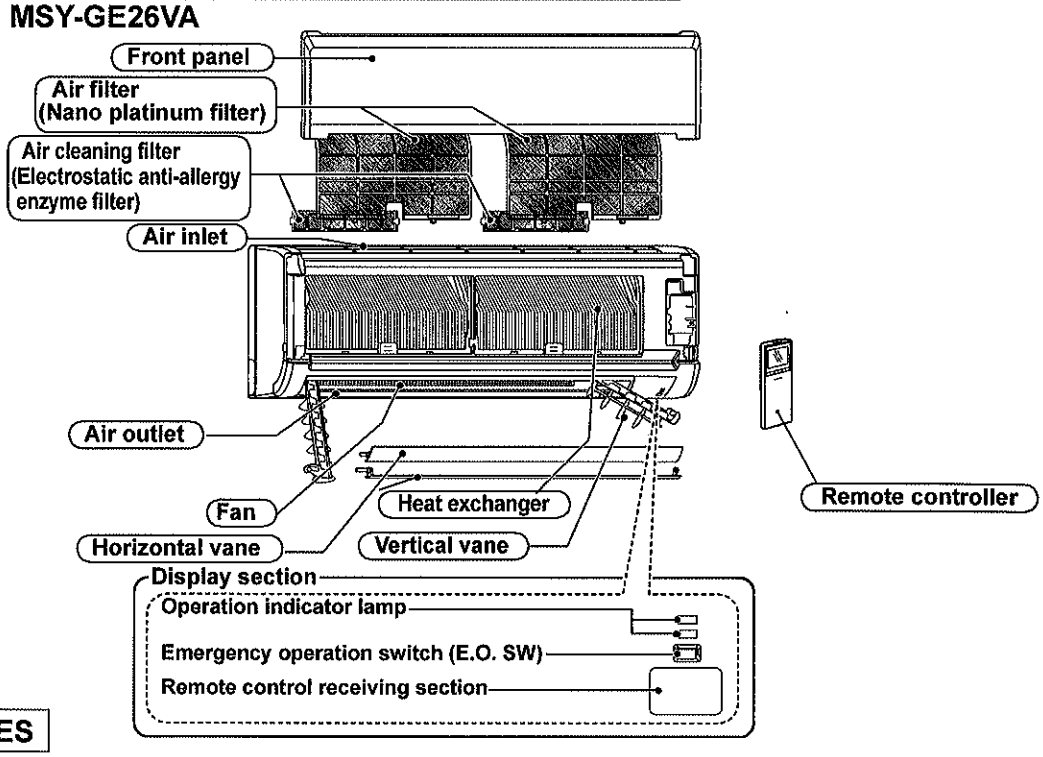

ACCESSORIES

	Model	MSY-GE10VA MSY-GE13VA MSY-GE15VA MSY-GE18VA	MSY-GE24VA MSY-GE26VA
①	Installation plate	1	1
②	Installation plate fixing screw 4 × 25 mm	5	7
③	Remote controller holder	1	1
④	Fixing screw for ③ 3.5 × 16 mm (Black)	2	2
⑤	Battery (AAA) for remote controller	2	2
⑥	Wireless remote controller	1	1
⑦	Felt tape (Used for left or left-rear piping)	1	1
⑧	Air cleaning filter	2	2

3 SPECIFICATION

Indoor model				MSY-GE10VA	MSY-GE13VA	MSY-GE15VA	MSY-GE18VA	MSY-GE24VA	MSY-GE26VA
Power supply				Single phase 230 V, 50 Hz					
Electrical data	Power input *1		W	20	29	39	43	65	
	Running current *1		A	0.22	0.29	0.39		0.55	
Fan motor	Model			RC0J40-EF				RC0J56-AE	
	Current *1		A	0.22	0.29	0.39		0.55	
Dimensions W × H × D			mm	798 × 295 × 232				1,100 × 325 × 238	
Weight			kg	10				16	
Special remarks	Air direction			5					
	Airflow	Super High + LONG + POWERFUL	m^3/h	–				1,242	
		Super High		684	768	852	906	1,074	
		High		534	552	624	708	924	
		Med.		402		510	576	798	
		Low		294		414	468	690	
		Quiet		252		348	390	582	
	Sound level	Super High + LONG + POWERFUL	dB(A)	–				53	
		Super High		40	45	48	49		
		High		36	37	40	44	45	
		Med.		29		35	38	41	
		Low		21	22	30	33	37	
		Quiet		19		26	28	30	
	Fan speed	Super High + LONG + POWERFUL	rpm	–				1,330	
		Super High		1,000	1,100	1,200	1,260	1,110	
		High		820	840	930	1,030	980	
		Med.		660		790	870		
		Low		520		670	740	780	
		Quiet		460		590	640	680	
	Fan speed regulator			5					
Remote controller model				KM09G				SG10B	

NOTE: Test conditions are based on ISO 5151.

Cooling: Indoor Dry-bulb temperature 27°C Wet-bulb temperature 19°C

Outdoor Dry-bulb temperature 35°C Wet-bulb temperature 24°C

*1 Measured under rated operating frequency.


Specifications and rating conditions of main electric parts

Fuse	(F11)	T3.15AL250V
Horizontal vane motor	(MV), (MV1)	12 VDC
Vertical vane motor **MSY-GE24VA** **MSY-GE26VA**	(MV2)	12 VDC
Varistor	(NR11)	S10K300E3K1 (ERZV10D471)
Terminal block	(TB)	3P

4 NOISE CRITERIA CURVES


MSY-GE10VA

FAN SPEED	FUNCTION	SPL(dB(A))	LINE
Super High	COOLING	40	

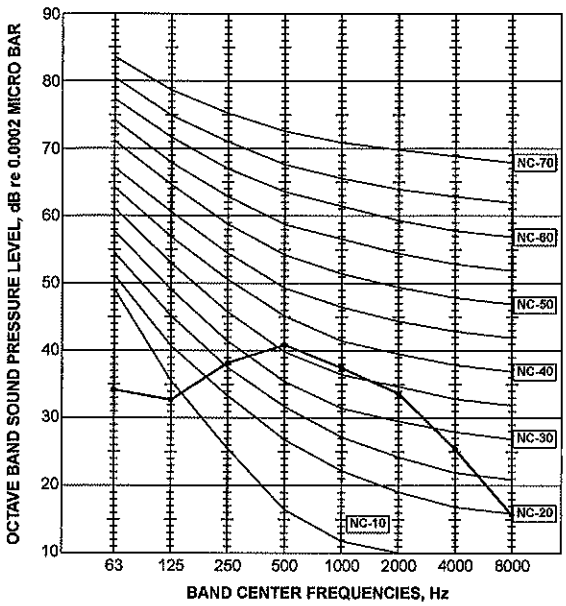


MSY-GE13VA

FAN SPEED	FUNCTION	SPL(dB(A))	LINE
Super High	COOLING	45	

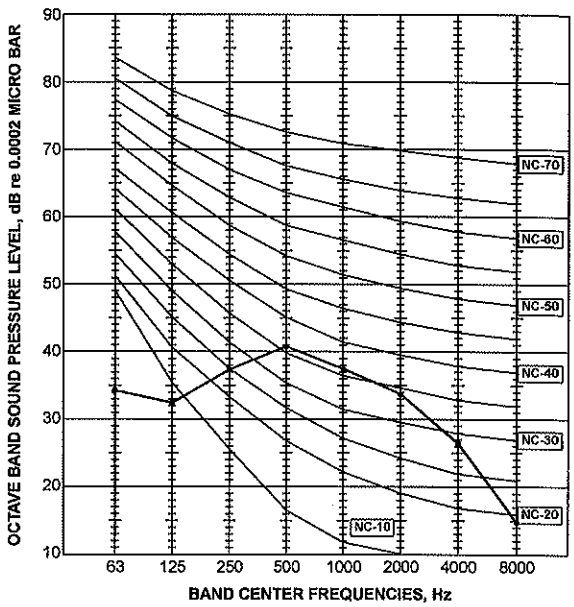


MSY-GE15VA

FAN SPEED	FUNCTION	SPL(dB(A))	LINE
Super High	COOLING	48	

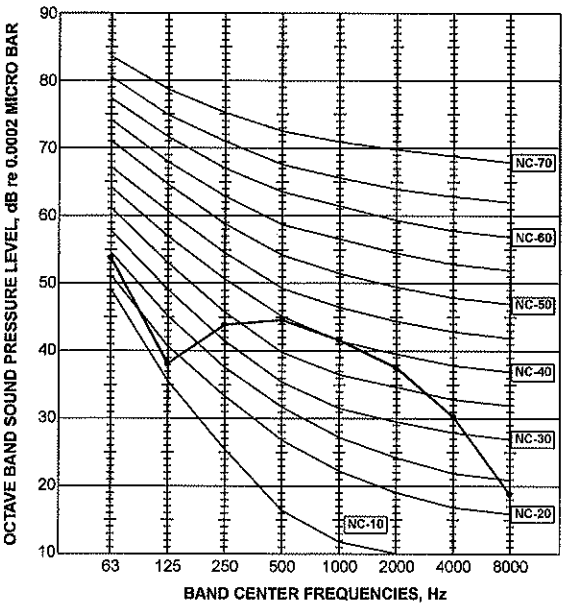


MSY-GE18VA

FAN SPEED	FUNCTION	SPL(dB(A))	LINE
Super High	COOLING	49	

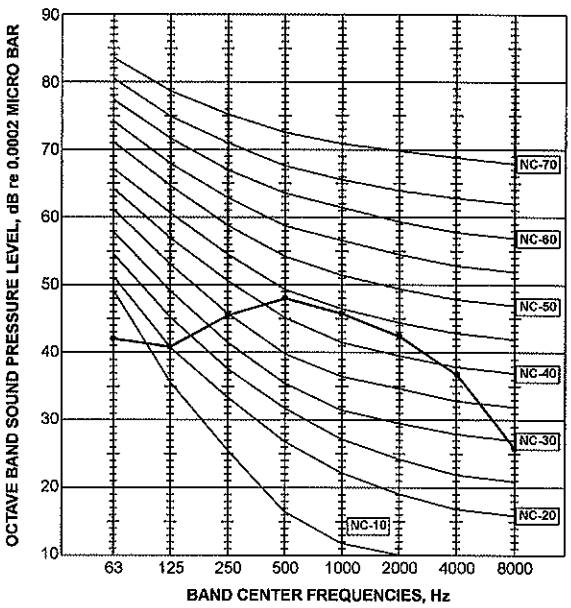


MSY-GE24VA

FAN SPEED	FUNCTION	SPL(dB(A))	LINE
Super High	COOLING	49	●—●
	HEATING	-	○—○

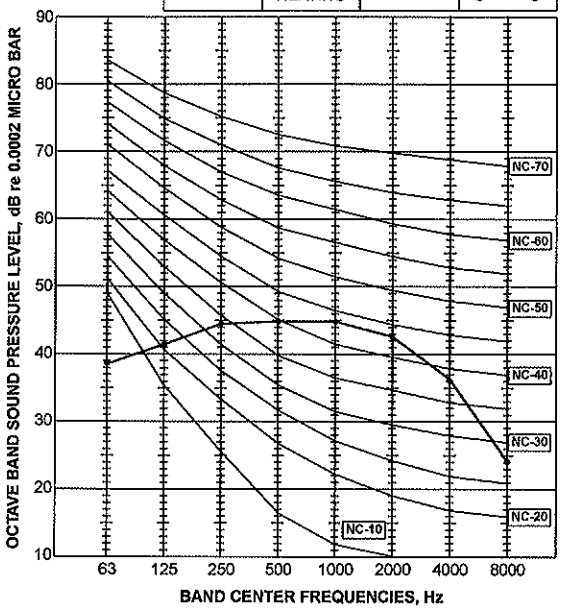


MSY-GE26VA

FAN SPEED	FUNCTION	SPL(dB(A))	LINE
Super High	COOLING	49	●—●
	HEATING	-	○—○

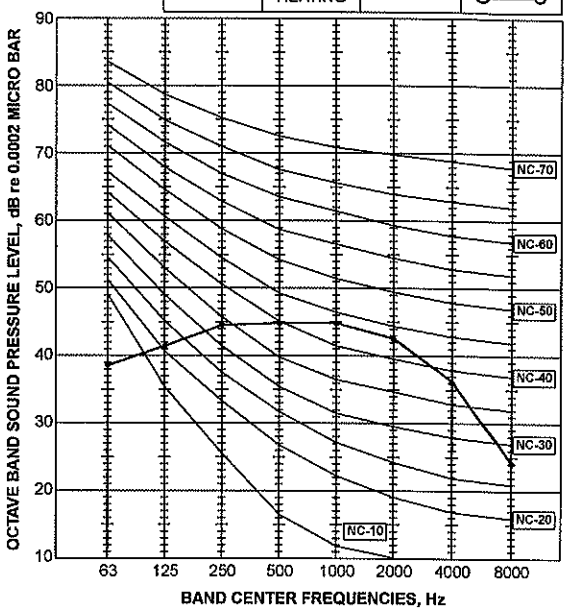


Test conditions
Cooling: Dry-bulb temperature 27°C
Wet-bulb temperature 19°C

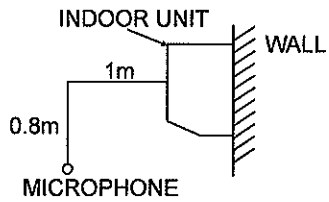

5 OUTLINES AND DIMENSIONS


MSY-GE10VA MSY-GE13VA MSY-GE15VA MSY-GE18VA

Unit: mm

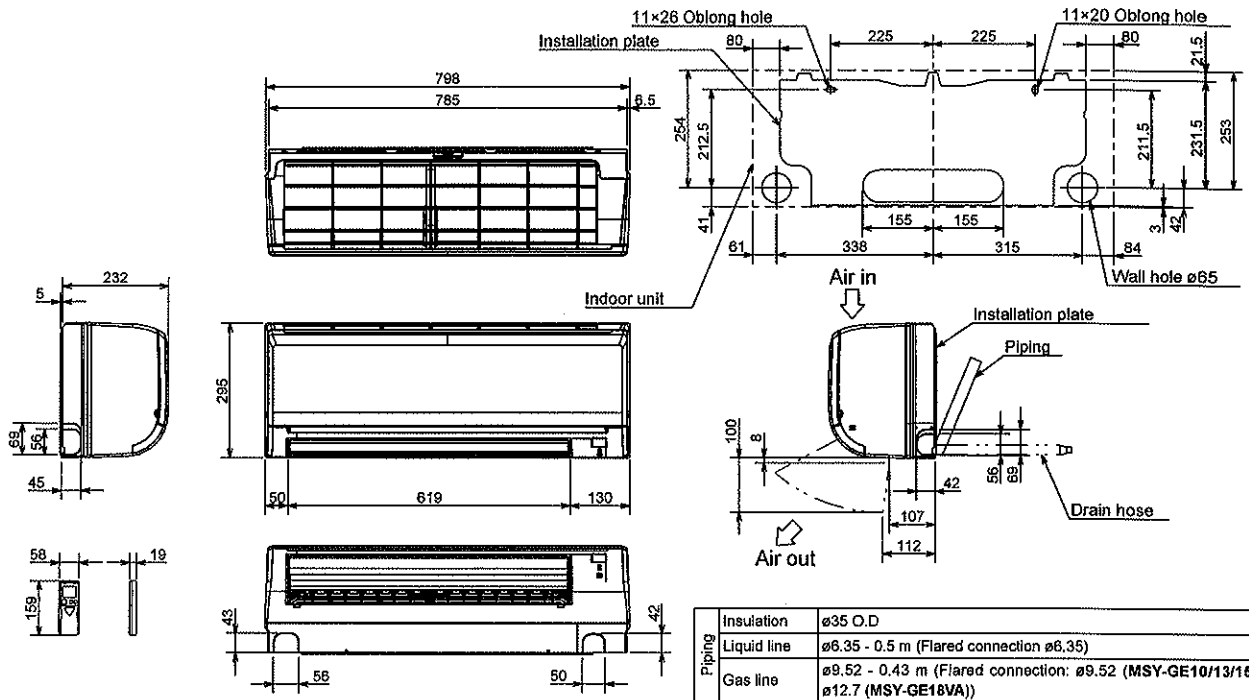

Piping	Insulation	ø35 O.D
	Liquid line	ø6.35 - 0.5 m (Flared connection ø6.35)
	Gas line	ø9.52 - 0.43 m (Flared connection: ø9.52 (**MSY-GE10/13/16VA**), ø12.7 (**MSY-GE18VA**))
Drain hose		Insulation ø28 O.D Connected part ø16 O.D


MSY-GE24VA MSY-GE26VA

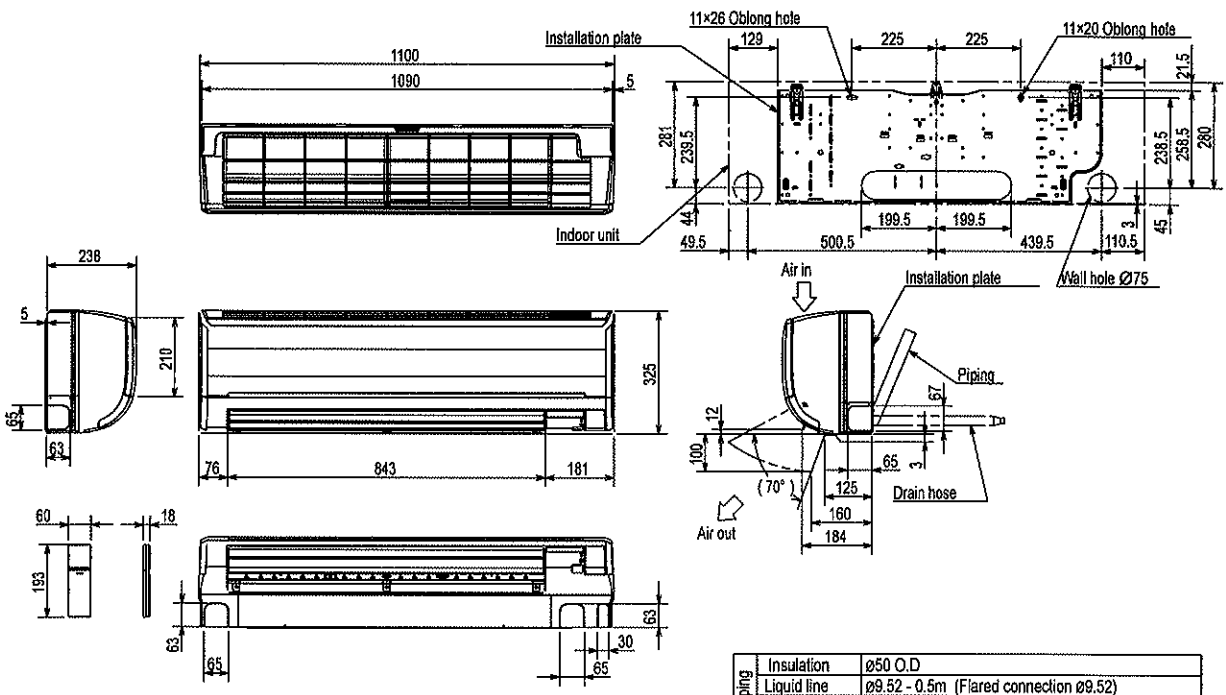

Piping	Insulation	ø50 O.D
	Liquid line	ø9.52 - 0.5m (Flared connection ø9.52)
	Gas line	ø12 - 0.43m (Flared connection ø15.88)
Drain hose		Insulation ø28 Connected part ø16 O.D

6 WIRING DIAGRAM


MSY-GE10VA MSY-GE13VA MSY-GE15VA MSY-GE18VA

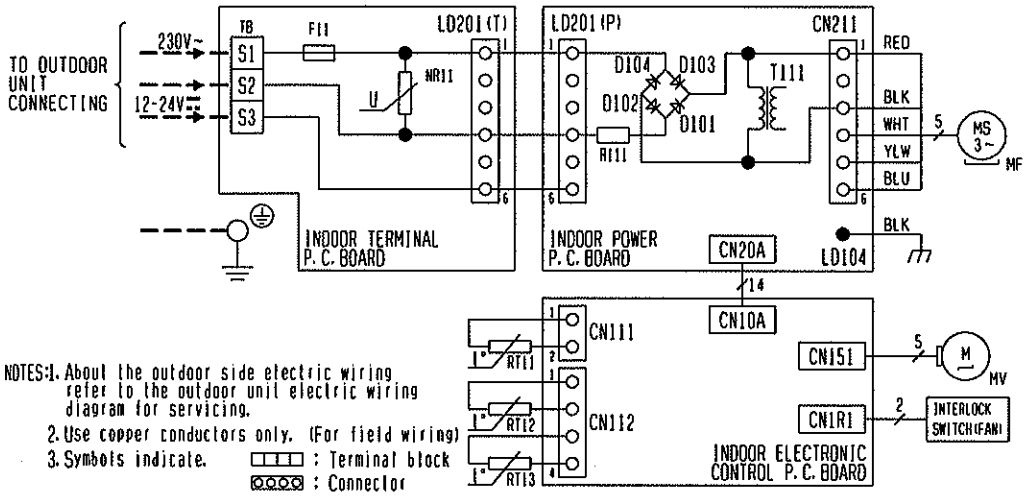

NOTES:1. About the outdoor side electric wiring refer to the outdoor unit electric wiring diagram for servicing.
2. Use copper conductors only. (For field wiring)
3. Symbols indicate. : Terminal block : Connector

SYMBOL	NAME
D101~D104	DIODE
F11	FUSE (T3.15AL250V)
MF	FAN MOTOR
MV	VANE MOTOR (HORIZONTAL)
NR11	VARISTOR
R111	RESISTOR (3.9Ω/5W)
RT11	ROOM TEMP. THERMISTOR
RT12	COIL TEMP. THERMISTOR (MAIN)
RT13	COIL TEMP. THERMISTOR (SUB)
T111	TRANSFORMER
TB	TERMINAL BLOCK

MSY-GE24VA MSY-GE26VA

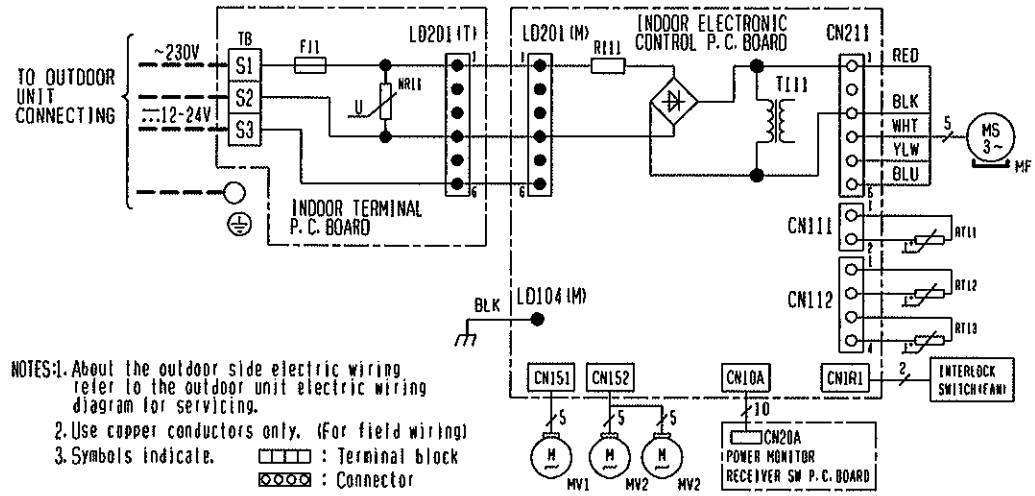


NOTES:1. About the outdoor side electric wiring refer to the outdoor unit electric wiring diagram for servicing.
2. Use copper conductors only. (For field wiring)
3. Symbols indicate. : Terminal block : Connector

SYMBOL	NAME
F11	FUSE (T3.15AL250V)
MF	FAN MOTOR
MV1	VANE MOTOR (HORIZONTAL)
MV2	VANE MOTOR (VERTICAL)
NR11	VARISTOR
R111	RESISTOR
RT11	ROOM TEMP. THERMISTOR
RT12	COIL TEMP. THERMISTOR (MAIN)
RT13	COIL TEMP. THERMISTOR (SUB)
T111	TRANSFORMER
TB	TERMINAL BLOCK


7 REFRIGERANT SYSTEM DIAGRAM

MSY-GE10VA MSY-GE13VA MSY-GE15VA MSY-GE18VA

Unit: mm

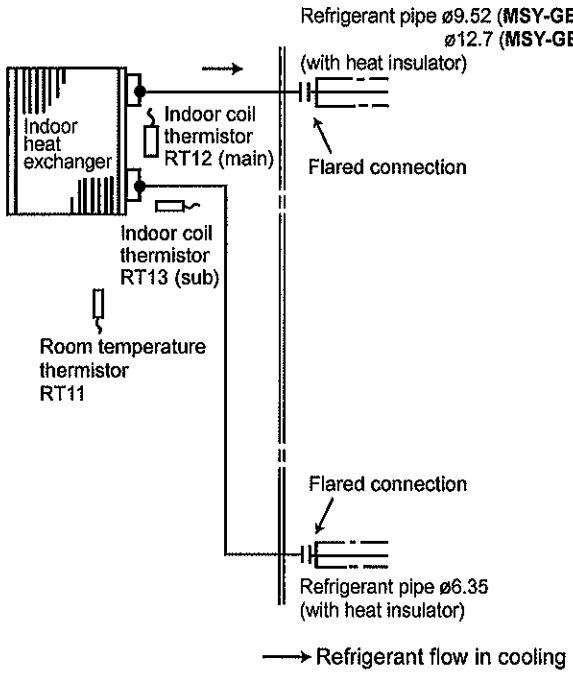

MSY-GE24VA MSY-GE26VA

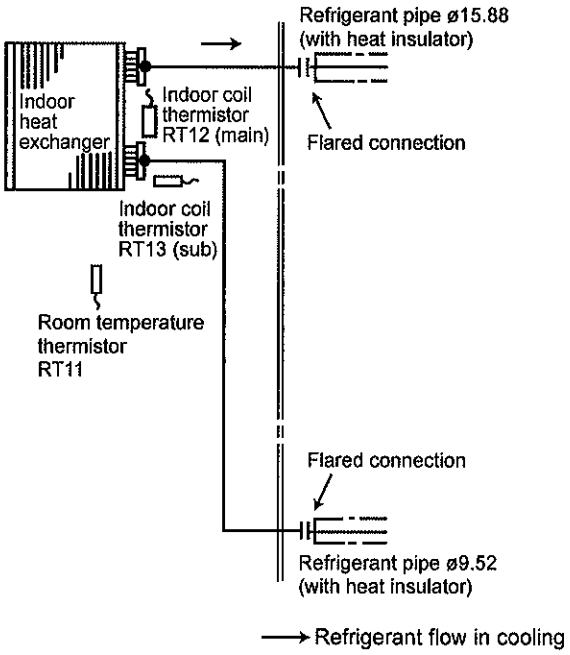

8 SERVICE FUNCTIONS

MSY-GE10VA MSY-GE13VA MSY-GE15VA MSY-GE18VA MSY-GE24VA MSY-GE26VA

8-1. TIMER SHORT MODE


For service, set time can be shortened by short circuit of JPG and JPS on the electronic control P.C. board.
The time will be shortened as follows. (Refer to 10-7.2,3.)
Set time: 1 minute → 1 second
Set time: 3 minutes → 3 seconds (It takes 3 minutes for the compressor to start operation. However, the starting time is shortened by short circuit-of JPG and JPS.)

8-2. P.C. BOARD MODIFICATION FOR INDIVIDUAL OPERATION

A maximum of 4 indoor units with wireless remote controllers can be used in a room.
In this case, to operate each indoor unit individually by each remote controller, P.C. boards of remote controller must be modified according to the number of the indoor unit.


How to modify the remote controller P.C. board
Remove batteries before modification.
The board has a print as shown below:

MSY-GE10/13/15/18VA

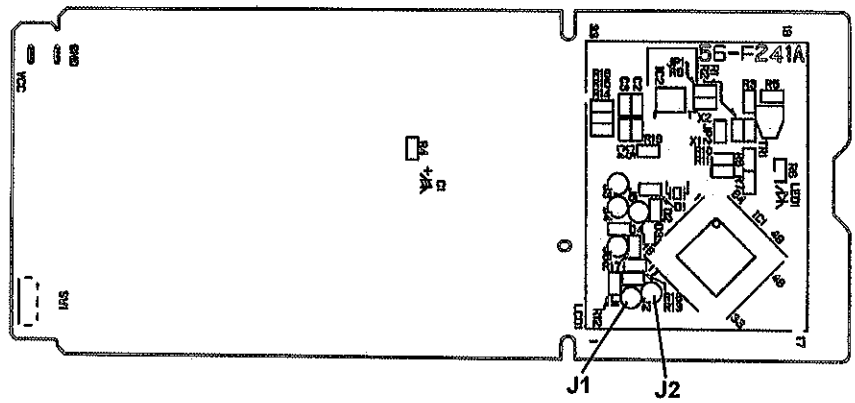

NOTE: For modification, take out the batteries and press the OPERATE/STOP (ON/OFF) button twice or 3 times at first. After modification, put back the batteries then press the RESET button.

MSY-GE24/26VA

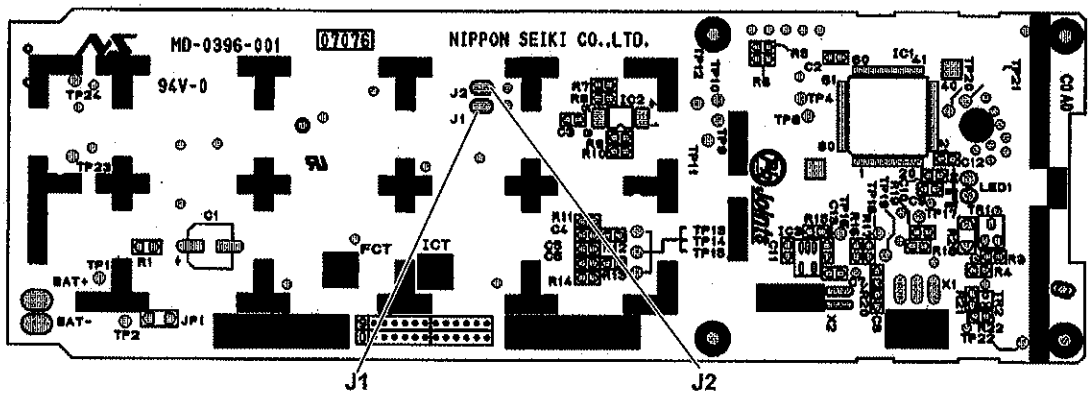

The P.C. board has the print "J1" and "J2". Solder "J1" and "J2" according to the number of indoor unit as shown in Table 1.
After modification, press the RESET button.

Table 1

	1 unit operation	2 units operation	3 units operation	4 units operation
No. 1 unit	No modification	Same as at left	Same as at left	Same as at left
No. 2 unit	—	Solder J1	Same as at left	Same as at left
No. 3 unit	—	—	Solder J2	Same as at left
No. 4 unit	—	—	—	Solder both J1 and J2

How to set the remote controller exclusively for particular indoor unit
After you turn the breaker ON, the first remote controller that sends the signal to the indoor unit will be regarded as the remote controller for the indoor unit.
The indoor unit will only accept the signal from the remote controller that has been assigned to the indoor unit once they are set.
The setting will be cancelled if the breaker is turned OFF, or the power supply is shut down.
Please conduct the above setting once again after the power has restored.

8-3. AUTO RESTART FUNCTION

When the indoor unit is controlled with the remote controller, the operation mode, the set temperature, and the fan speed are memorized by the indoor electronic control P.C. board. "AUTO RESTART FUNCTION" automatically starts operation in the same mode just before the shut-off of the main power.

Operation

① If the main power has been cut, the operation settings remain.


② After the power is restored, the unit restarts automatically according to the memory.
(However, it takes at least 3 minutes for the compressor to start running.)

How to release "AUTO RESTART FUNCTION"


① Turn OFF the main power for the unit.

② Solder the jumper wire to JR07 on the indoor electronic control P.C. board. (Refer to 10-7.2.3.)

MSY-GE10/13/15/18VA

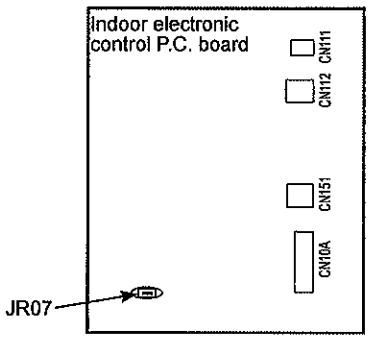

MSY-GE24/26VA

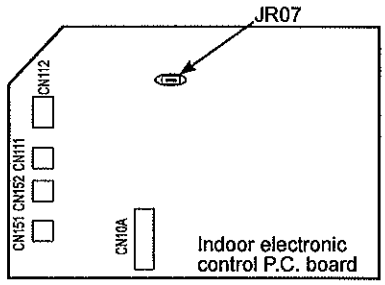

NOTE:


- The operation settings are memorized when 10 seconds have passed after the indoor unit was operated with the remote controller.
- If main power is turned OFF or a power failure occurs while AUTO START/STOP timer is active, the timer setting is cancelled.
- If the unit has been OFF with the remote controller before power failure, the auto restart function does not work as the power button of the remote controller is OFF.
- To prevent breaker OFF due to the rush of starting current, systematize other home appliance not to turn ON at the same time.
- When some air conditioners are connected to the same supply system, if they are operated before power failure, the starting current of all the compressors may flow simultaneously at restart.
  Therefore, the special counter-measures are required to prevent the main voltage-drop or the rush of the starting current by adding to the system that allows the units to start one by one.

9 MICROPROCESSOR CONTROL


MSY-GE10VA MSY-GE13VA MSY-GE15VA MSY-GE18VA MSY-GE24VA MSY-GE26VA

WIRELESS REMOTE CONTROLLER

MSY-GE10/13/15/18VA

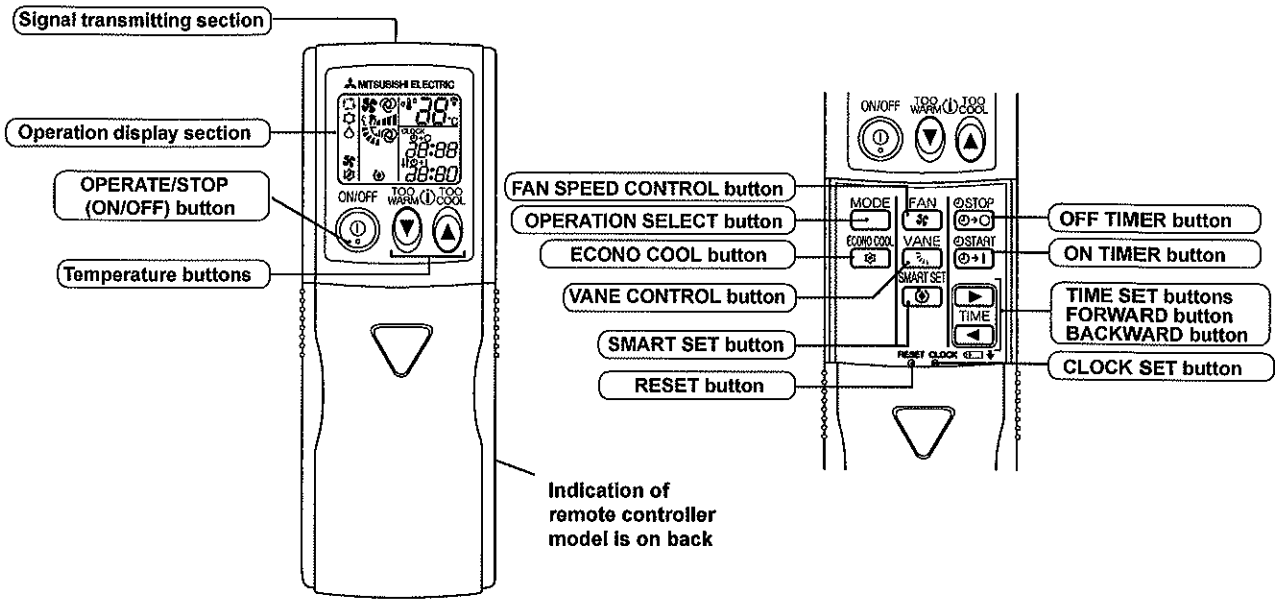

MSY-GE24/26VA

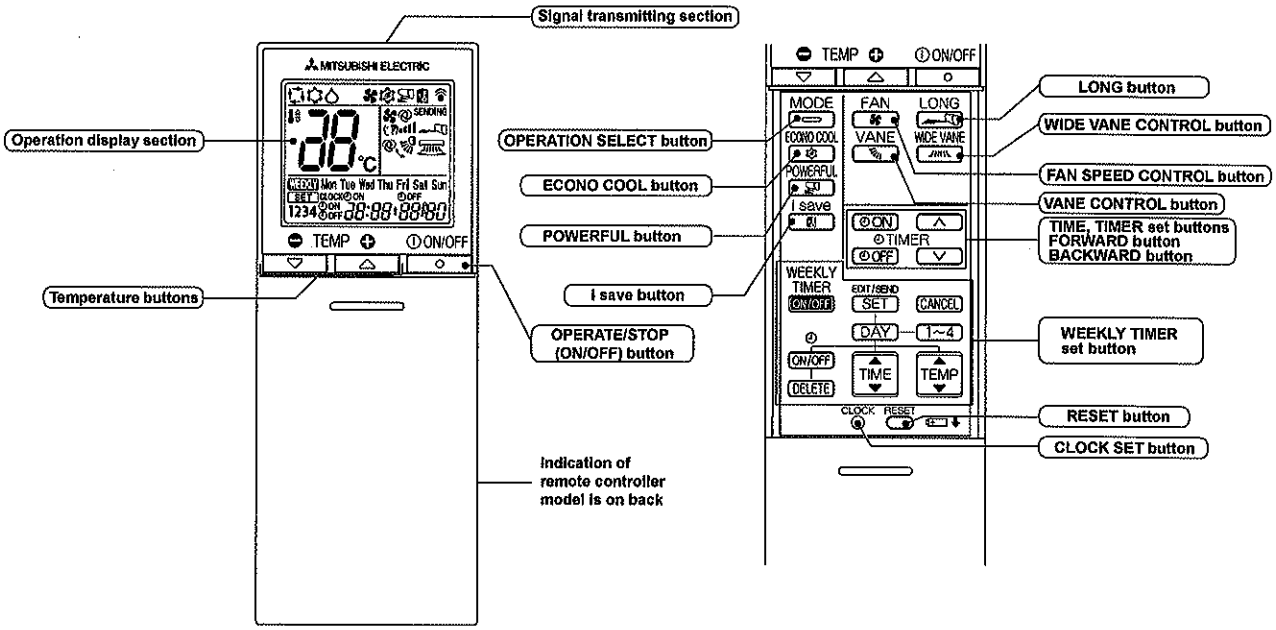

NOTE: Last setting will be stored after the unit is turned OFF with the remote controller. Indoor unit receives the signal of the remote controller with beeps.

INDOOR UNIT DISPLAY SECTION

Operation Indicator lamp

The operation indicator at the right side of the indoor unit indicates the operation state.

•The following indication applies regardless of shape of the indication.

Indication	Operation state	Room temperature
☀ ☀	The unit is operating to reach the set temperature	About 2°C or more away from set temperature
☀ ○	The room temperature is approaching the set temperature	About 1 to 2°C from set temperature

☀ Lighted
☀ Blinking
○ Not lighted

9-1. COOL (☼) OPERATION

(1) Press OPERATE/STOP (ON/OFF) button.
OPERATION INDICATOR lamp of the indoor unit turns ON with a beep tone.
(2) Select COOL mode with OPERATION SELECT button.
(3) Press TEMPERATURE buttons [TOO WARM or TOO COOL button (**MSY-GE10/13/15/18VA**)/TEMP ⊖ or ⊕ button (**MSY-GE24/26VA**)] to select the desired temperature. The setting range is 16 - 31°C.

1. Coil frost prevention

The compressor operational frequency is controlled by the temperature of the indoor heat exchanger to prevent the coil from frosting.
When the temperature of indoor heat exchanger becomes too low, the coil frost prevention mode works.
The indoor fan operates at the set speed and the compressor stops. This mode continues until the temperature of indoor heat exchanger rises.

2. Low outside temperature operation

When the outside temperature is lower, low outside temperature operation starts, and the outdoor fan slows or stops.

9-2. DRY (△) OPERATION

(1) Press OPERATE/STOP (ON/OFF) button.
OPERATION INDICATOR lamp of the indoor unit turns ON with a beep tone.
(2) Select DRY mode with OPERATION SELECT button.
(3) The set temperature is determined from the initial room temperature.

1. Coil frost prevention

Coil frost prevention is as same as COOL mode. (9-1.1.)

2. Low outside temperature operation

Low outside temperature operation is as same as COOL mode. (9-1.2.)

9-3. FAN(✿)OPERATION

(1) Press OPERATE/STOP (ON/OFF) button.
OPERATION INDICATOR lamp of the indoor unit turns ON with a beep tone.
(2) Select FAN mode with OPERATION SELECT button.
(3) Select the desired fan speed. When AUTO, it becomes Low.
Only indoor fan operates. Outdoor unit does not operate.

9-4. "I FEEL CONTROL" (▭) OPERATION

(1) Press OPERATE/STOP (ON/OFF) button on the remote controller. OPERATION INDICATOR lamp of the indoor unit turns ON with a beep tone.
(2) Select "I FEEL CONTROL" mode with OPERATION SELECT button.
(3) The operation mode is determined by the room temperature at start-up of the operation.
- Once the mode is fixed, the mode does not change by room temperature afterwards.
- Under the ON-TIMER [(◴→) (**MSY-GE10/13/15/18VA**)/◴ ON (**MSY-GE24/26VA**)] operation, mode is determined according to the room temperature at the start-up of operation.

(4) The initial set temperature is decided by the initial room temperature.

Initial room temperature	Model	Initial set temperature
26°C or more	COOL mode of "I FEEL CONTROL"	24°C
25 to 26°C		Initial room temperature minus 2°C
Less than 25°C	DRY mode of "I FEEL CONTROL"	Initial room temperature minus 2°C

(5) TEMPERATURE buttons

In "I FEEL CONTROL" (▭) mode, set temperature is decided by the microprocessor based on the room temperature. In addition, set temperature can be controlled by TOO WARM or TOO COOL button (**MSY-GE10/13/15/18VA**)/TEMP ⊖ or ⊕ button (**MSY-GE24/26VA**) when you feel too cool or too warm.

Each time the TOO WARM or TOO COOL button (**MSY-GE10/13/15/18VA**)/TEMP ⊖ or ⊕ button (**MSY-GE24/26VA**) is pressed, the indoor unit receives the signal and emits a beep tone.

• **Fuzzy control**

When the TOO COOL or TOO WARM button (**MSY-GE10/13/15/18VA**)/TEMP ⊖ or ⊕ button (**MSY-GE24/26VA**) is pressed, the microprocessor changes the set temperature, considering the room temperature, the frequency of pressing TOO COOL or TOO WARM button (**MSY-GE10/13/15/18VA**)/TEMP ⊖ or ⊕ button (**MSY-GE24/26VA**) and the user's preference to heat or cool. So this is called "Fuzzy control", and works only in "I FEEL CONTROL" mode. In DRY mode of "I FEEL CONTROL", the set temperature does not change.



···To raise the set temperature 1~2°C

or





···To lower the set temperature 1~2°C

or



9-5. AUTO VANE OPERATION


1. Horizontal vane

(1) Vane motor drive


These models are equipped with a stepping motor for the horizontal vane. The rotating direction, speed, and angle of the motor are controlled by pulse signals (approximate 12 V) transmitted from indoor microprocessor.

(2) The horizontal vane angle and mode change as follows by pressing VANE CONTROL button.

MSY-GE10/13/15/18VA



MSY-GE24/26VA



(3) Positioning

To confirm the standard position, the vane moves until it touches the vane stopper. Then the vane is set to the selected angle.

Confirming of standard position is performed in the following cases:

(a) When the operation starts or finishes (including timer operation).

(b) When the test run starts.

(4) VANE AUTO (@) mode

In VANE AUTO mode, the microprocessor automatically determines the vane angle to make the optimum room temperature distribution.

In COOL and DRY operation

Vane angle is fixed to Horizontal position.



(5) STOP (operation OFF) and ON TIMER standby

In the following cases, the horizontal vane returns to the closed position.

(a) When OPERATE/STOP (ON/OFF) button is pressed (POWER OFF).

(b) When the operation is stopped by the emergency operation.

(c) When ON TIMER is ON standby.

(6) Dew prevention

During COOL or DRY operation with the vane angle at Angle 4 or 5 when the compressor cumulative operation time exceeds 1 hour, the vane angle automatically changes to Angle 1 for dew prevention.

(7) SWING (or) mode


By selecting SWING mode with VANE CONTROL button, the horizontal vane swings vertically.

(8) ECONO COOL (🌿) operation (ECONOmical operation)
When ECONO COOL button is pressed in COOL mode, set temperature is automatically set 2°C higher.
Also the horizontal vane swings in various cycle.
SWING operation makes you feel cooler than set temperature. So, even though the set temperature is higher, the air conditioner can keep comfort. As a result, energy can be saved.
To cancel this operation, select a different mode or press one of the following buttons in ECONO COOL operation: ECONO COOL, VANE CONTROL, LONG (**MSY-GE24/26VA**) or POWERFUL (**MSY-GE24/26VA**) button.

(9) POWERFUL ( ) operation (**MSY-GE24/26VA**)
The air conditioner automatically adjusts the fan speed and the set temperature, and operates the POWERFUL mode. The POWERFUL mode is cancelled automatically 15 minutes after operation starts, or when POWERFUL button is pressed once again within 15 minutes after operation starts. The operation mode returns to the mode prior to POWERFUL operation.
To manually cancel this operation, select a different mode or press one of the following buttons within 15 minutes after operation starts: OPERATE/STOP (ON/OFF), ECONO COOL, FAN SPEED CONTROL or i-save button.

(10) LONG MODE ( ) (**MSY-GE24/26VA**)
By pressing LONG button indoor fan speed becomes faster than setting fan speed on the remote controller, and the horizontal vane moves to the position for LONG mode. The remote controller displays " ". LONG mode is cancelled when LONG button is pressed once again or VANE CONTROL button is pressed or ECONO COOL button is pressed in COOL mode. In the following example, the vertical vane is set to (front.).

COOL/DRY

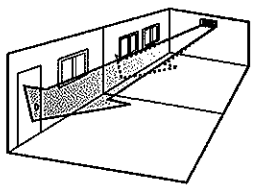

Fan speed : Faster
Solid arrow : When the LONG mode is used.
Dotted arrow : When the LONG mode is not used.

2. Vertical vane (MSY-GE24/26VA)

(1) Vane motor drive
These models are equipped with a stepping motor for the vertical vane. The rotating direction, speed, and angle of the motor are controlled by pulse signals (approximate 12 V) transmitted from microprocessor.

(2) The vertical vane angle and mode change as follows by pressing WIDE VANE CONTROL button.

(3) Positioning
To confirm the standard position, the vane moves until it touches the vane stopper. Then the vane is set to the selected angle.

→1 → 2 → 3 → 4 → 5 → 6 → (SWING)

Confirming of standard position is performed in the following cases:
(a) OPERATE/STOP (ON/OFF) button is pressed (POWER ON).
(b) SWING is started.

(4) SWING ( ) MODE
By selecting SWING mode with WIDE VANE CONTROL button, the vertical vane swings horizontally. The remote controller displays " ". Swing mode is cancelled when WIDE VANE CONTROL button is pressed once again.

9-6. TIMER OPERATION

1. How to set the time

(1) Check that the current time is set correctly.

NOTE: Timer operation will not work without setting the current time. Initially "0:00" blinks at the current time display of TIME MONITOR, so set the current time correctly with CLOCK SET button.

How to set the current time

(a) Press the CLOCK set button.

(b) Press the TIME SET buttons (▶ and ◀ / ∧ and ∨) to set the current time.

- Each time FORWARD button (▶ / ∧) is pressed, the set time increases by 1 minute, and each time BACKWARD button (◀ / ∨) is pressed, the set time decreases by 1 minute.
- Pressing those buttons longer, the set time increases/decreases by 10 minutes.

(c) Press the CLOCK set button.

(2) Press OPERATE/STOP (ON/OFF) button to start the air conditioner.

(3) Set the time of timer.

ON timer setting

(a) Press ON TIMER button(START / ON) during operation.

(b) Set the time of the timer using TIME SET buttons (▶ and ◀ / ∧ and ∨). ※

OFF timer setting

(a) Press OFF TIMER button (STOP / OFF) during operation.

(b) Set the time of the timer using TIME SET buttons (▶ and ◀ / ∧ and ∨). ※

※ Each time FORWARD button (▶ / ∧) is pressed, the set time increases by 10 minutes: each time BACKWARD button (◀ / ∨) is pressed, the set time decreases by 10 minutes.

2. To release the timer

To release ON timer, press ON TIMER button (START / ON).


To release OFF timer, press OFF TIMER button(STOP / OFF).

TIMER is cancelled and the display of set time disappears.


PROGRAM TIMER

- OFF timer and ON timer can be used in combination. The timer of the set time that is reached first will operate first.
- "↓ / ◀" and "↑ / ▶" display shows the order of OFF timer and ON timer operation.

(Example 1) The current time is 8:00 PM.
The unit turns off at 11:00 PM, and on at 6:00 AM.

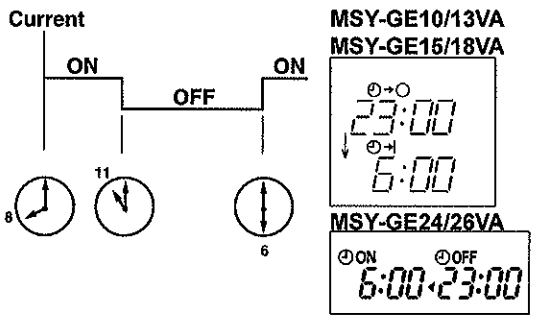


(Example 2) The current time is 11:00 AM.
The unit turns on at 5:00 PM, and off at 9:00 PM.

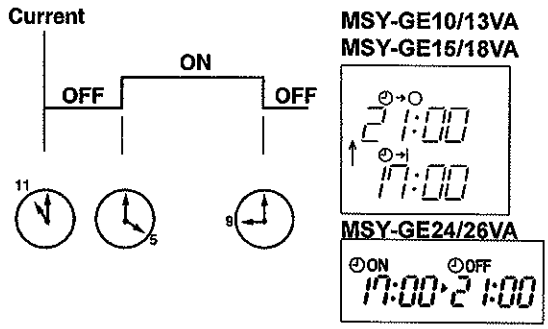

NOTE: If the main power is turned OFF or a power failure occurs while ON/OFF timer is active, the timer setting is cancelled. As these models are equipped with an auto restart function, the air conditioner starts operating with timer cancelled when power is restored.

9-7. WEEKLY TIMER OPERATION (MSY-GE24/26VA)

- A maximum of 4 ON or OFF timers can be set for individual days of the week.
- A maximum of 28 ON or OFF timers can be set for a week.

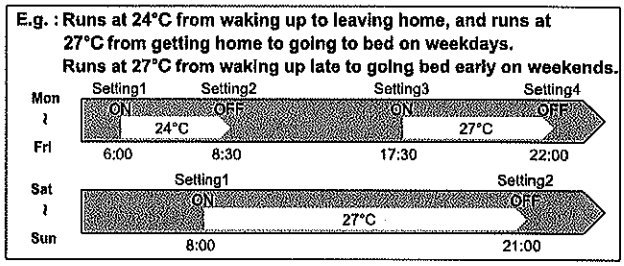

NOTE:

The simple ON/OFF timer setting is available while the weekly timer is on. In this case, the ON/OFF timer has priority over the weekly timer; the weekly timer operation will start again after the simple ON/OFF timer is complete.

1. How to set the weekly timer


* Make sure that the current time and day are set correctly.

(1) Press [EDIT/SEND SET] button to enter the weekly timer setting mode.




* [SET] blinks.

(2) Press [DAY] and [1~4] buttons to select setting day and number.

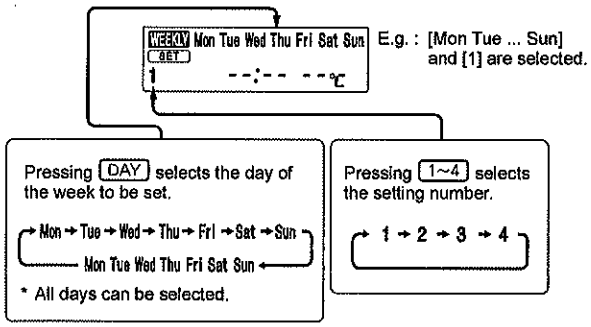


(3) Press [ON/OFF], [TIME], and [TEMP] buttons to set ON/OFF, time, and temperature.

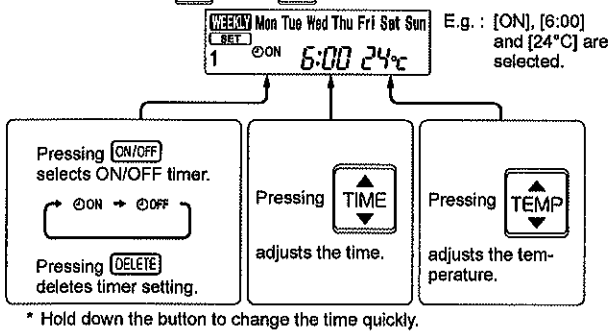

* Hold down the button to change the time quickly.

Press [DAY] and [1~4] buttons to continue setting the timer for other days and/or numbers.

(4) Press [EDIT/SEND SET] button to complete and transmit the weekly timer setting.



* [SET] which was blinking goes out, and the current time will be displayed.

NOTE:

- Press [EDIT/SEND SET] button to transmit the setting information of weekly timer to the indoor unit. Point the remote controller toward the indoor unit for 3 seconds.
- When setting the timer for more than one day of the week or one number, [EDIT/SEND SET] button does not have to be pressed per each setting. Press [EDIT/SEND SET] button once after all the settings are complete. All the weekly timer settings will be saved.
- Press [EDIT/SEND SET] button to enter the weekly timer setting mode, and press and hold [DELETE] button for 5 seconds to erase all weekly timer settings. Point the remote controller toward the indoor unit.

(5) Press WEEKLY TIMER ON/OFF button to turn the weekly timer ON. (WEEKLY lights.)

•When the weekly timer is ON, the day of the week whose timer setting is complete, will light.

Press WEEKLY TIMER ON/OFF button again to turn the weekly timer OFF. (WEEKLY goes out.)

NOTE:
The saved settings will not be cleared when the weekly timer is turned OFF.

2. Checking weekly timer setting

(1) Press EDIT/SEND SET button to enter the weekly timer setting mode.

*SET blinks.

(2) Press DAY or 1~4 buttons to view the setting of the particular day or number.

(3) Press CANCEL button to exit the weekly timer setting.

NOTE:
When all days of the week are selected to view the settings and a different setting is included among them, --:-- --℃ will be displayed.

9-8. SMART SET (◉) OPERATION (MSY-GE10/13/15/18VA)

1. How to SET SMART SET operation

(1) Press OPERATE/STOP (ON/OFF) button.
(2) Select COOL or ECONO COOL mode.
(3) Press SMART SET button.
(4) Set the temperature, fan speed, and airflow direction for SMART SET operation.

NOTE:
• SMART SET operation cannot be selected during DRY or AUTO mode operation.
• 1 group of setting can be saved.

2. How to cancel operation

• Press SMART SET button again.
• SMART SET operation can also be cancelled by pressing OPERATION SELECT button to change the operation mode.
The same setting is selected from the next time by simply pressing SMART SET button.

9-9. i-save (i) OPERATION (MSY-GE24/26VA)

1. How to set i-save operation

(1) Press OPERATE/STOP (ON/OFF) button.
(2) Select COOL or ECONO COOL mode.
(3) Press i-save button.
(4) Set the temperature, fan speed, and airflow direction for i-save operation.

NOTE:
• i-save operation cannot be selected during DRY or AUTO mode operation.

2. How to cancel operation

• Press i-save button again.
• i-save operation also be cancelled by pressing OPERATION SELECT button or POWERFUL button to change the operation mode.
The same setting is selected from the next time by simply pressing i-save button.


9-10. EMERGENCY/TEST OPERATION

In case of test run operation or emergency operation, use EMERGENCY OPERATION switch on the right side of the indoor unit.
Emergency operation is available when the remote controller is missing, has failed or the batteries of the remote controller run down. The unit will start and OPERATION INDICATOR lamp will light.
The first 30 minutes of operation is the test run operation. This operation is for servicing. The indoor fan runs at High speed and the temperature control does not work.
After 30 minutes of test run operation, the system shifts to EMERGENCY COOL MODE with a set temperature of 24°C. The fan speed shifts to Med.
The coil frost prevention works even in the test run or the emergency operation.
In the test run or the emergency operation, the horizontal vane operates in VANE AUTO (@) mode.
Emergency operation continues until EMERGENCY OPERATION switch is pressed once the unit receives any signal from the remote controller. In case of latter, normal operation will start.


Operation mode	COOL
Set temperature	24°C
Fan speed	Med.
Horizontal vane	Auto

The operation mode is indicated by the Operation indicator lamp as following

Operation indicator lamp

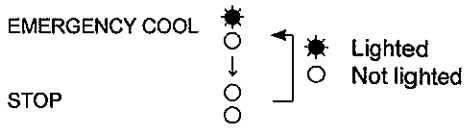

NOTE: Do not press EMERGENCY OPERATION switch during normal operation.

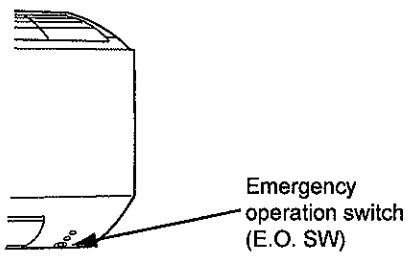

9-11. 3-MINUTE TIME DELAY OPERATION

When the system turns OFF, compressor will not restart for 3 minutes as 3-minute time delay function operates to protect compressor from overload.

10 TROUBLESHOOTING

MSY-GE10VA MSY-GE13VA MSY-GE15VA MSY-GE18VA MSY-GE24VA MSY-GE26VA


10-1. CAUTIONS ON TROUBLESHOOTING

1. Before troubleshooting, check the following

1) Check the power supply voltage.
2) Check the indoor/outdoor connecting wire for miswiring.

2. Take care of the following during servicing

1) Before servicing the air conditioner, be sure to turn OFF the main unit first with the remote controller, and then after confirming the horizontal vane is closed, turn OFF the breaker and/or disconnect the power plug.
2) Be sure to turn OFF the power supply before removing the front panel, the cabinet, the top panel, and the P.C. board.
3) When removing the P.C. board, hold the edge of the board with care NOT to apply stress on the components.
4) When connecting or disconnecting the connectors, hold the housing of the connector. DO NOT pull the lead wires.

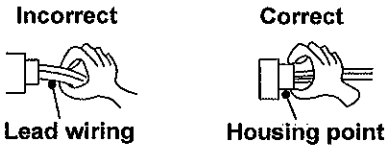

3. Troubleshooting procedure

1) First, check if the OPERATION INDICATOR lamp on the indoor unit is flashing ON and OFF to indicate an abnormality. To make sure, check how many times the OPERATION INDICATOR lamp is flashing ON and OFF before starting service work.
2) Before servicing, check that the connector and terminal are connected properly.
3) When the P.C. board seems to be defective, check the copper foil pattern for disconnection and the components for bursting and discoloration.
4) When troubleshooting, refer to 10-2, 10-3 and 10-4.


4. How to replace batteries


Weak batteries may cause the remote controller malfunction.
In this case, replace the batteries to operate the remote controller normally.

① Remove the front lid and insert batteries. Then reattach the front lid.


② Press RESET button with a thin instrument, and then use the remote controller.


MSY-GE10/13/15/18VA

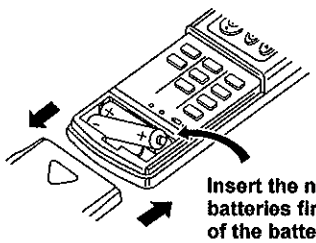

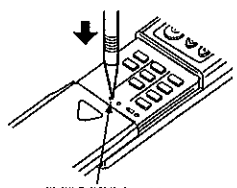

MSY-GE24/26VA

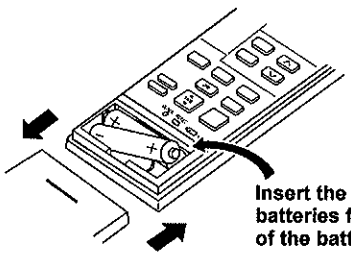

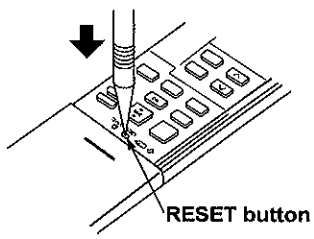


NOTE: 1. If RESET button is not pressed, the remote controller may not operate correctly.
2. This remote controller has a circuit to automatically reset the microcomputer when batteries are replaced. This function is equipped to prevent the microcomputer from malfunctioning due to the voltage drop caused by the battery replacement.
3. Do not use the leaking batteries.

5. How to install the horizontal vane

If horizontal vane is not installed correctly, all of the operation indicator lamps will blink. In this case, install the horizontal vane correctly by following the procedures ① to ②.


NOTE: Before installation of the horizontal vane, turn OFF the power supply.

MSY-GE10/13/15/18VA

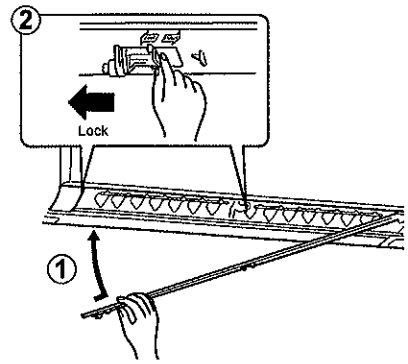

In procedure ② lock the stoppers until they click into place.

MSY-GE24/26VA

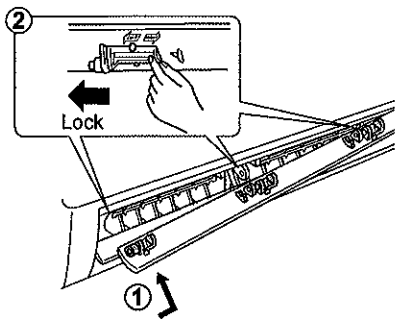

※ Check the upper and the lower vane.

10-2. FAILURE MODE RECALL FUNCTION


Outline of the function

This air conditioner can memorize the abnormal condition which has occurred once.
Even though LED indication listed on the troubleshooting check table (10-4.) disappears, the memorized failure details can be recalled.

1. Flow chart of failure mode recall function for the indoor/outdoor unit

MSY-GE10VA
MSY-GE13VA
MSY-GE15VA
MSY-GE18VA

MSY-GE24VA
MSY-GE26VA

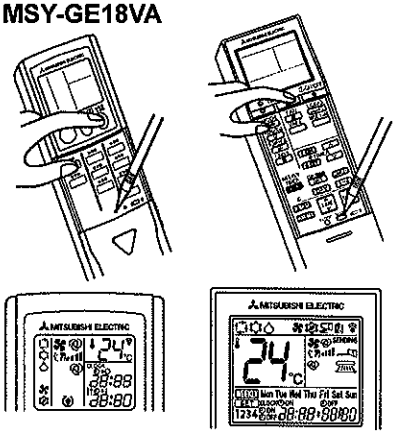

Operational procedure

The cause of abnormality cannot be found because the abnormality does not recur.

Setting up the failure mode recall function

Turn ON the power supply.
<Preparation of the remote controller>
① While pressing both OPERATION SELECT button and TOO COOL button (**MSY-GE10/13/15/18VA**)/TEMP ⊕ button (**MSY-GE24/26VA**) on the remote controller at the same time, press RESET button.
② First, release RESET button.
Hold down the other two buttons for another 3 seconds. Confirm all the indicators on the LCD screen of the remote controller are displayed. Then release the buttons.

Press OPERATE/STOP (ON/OFF) button of the remote controller (the set temperature is displayed) with the remote controller headed towards the indoor unit. ※1

※1 Regardless of normal or abnormal condition, a short beep is emitted once the signal is received.

Does upper lamp of OPERATION INDICATOR lamp on the indoor unit blink at the interval of 0.5 seconds?
Blinks: Either indoor or outdoor unit is abnormal. Beep is emitted at the same timing as the blinking of upper lamp of OPERATION INDICATOR lamp. ※2

No (OFF) → Indoor unit is normal.
But the outdoor unit might be abnormal because there are some abnormalities that can not be recalled with this way.
Confirm if outdoor unit is abnormal according to the detailed outdoor unit failure mode recall function.

Yes (Blinks)

Judgment of indoor/outdoor abnormality

Before blinking, does upper lamp of OPERATION INDICATOR lamp stay ON for 3 seconds?
Stays ON for 3 seconds (without beep): The outdoor unit is abnormal.

Yes → The outdoor unit is abnormal.
Check the blinking pattern, and confirm the abnormal point with the outdoor unit failure mode table. (Refer to outdoor unit service manual.)
Make sure to check at least two consecutive blinking cycles. ※3

No → The indoor unit is abnormal.
Check the blinking pattern, and confirm the abnormal point with the indoor unit failure mode table. (Refer to 10-2.2)
Make sure to check at least two consecutive blinking cycles. ※2

Releasing the failure mode recall function

Release the failure mode recall function by the following procedures.
Turn OFF the power supply and turn it ON again.
Press RESET button of the remote controller.


Repair the defective parts.

Deleting the memorized abnormal condition


① After repairing the unit, recall the failure mode again according to "Setting up the failure mode recall function" mentioned above.
② Press OPERATE/STOP (ON/OFF) button of the remote controller (the set temperature is displayed) with the remote controller headed towards the indoor unit.
③ Press EMERGENCY OPERATION switch so that the memorized abnormal condition is deleted.
④ Release the failure mode recall function according to "Releasing the failure mode recall function" mentioned above.

NOTE: 1. Make sure to release the failure mode recall function once it is set up, otherwise the unit cannot operate properly.
2. If the abnormal condition is not deleted from the memory, the last abnormal condition is kept memorized.

※2. Blinking pattern when the indoor unit is abnormal:

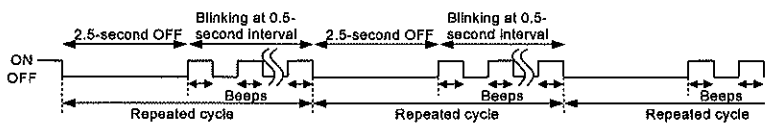

※3.Blinking pattern when the outdoor unit is abnormal:

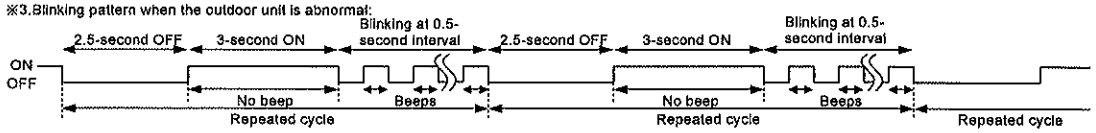


2. Indoor unit failure mode table

Upper lamp of OPERATION INDICATOR lamp	Abnormal point (Failure mode)	Condition	Correspondence
Not lighted	Normal	—	—
1-time flash every 0.5-second	Room temperature thermistor	The room temperature thermistor short or open circuit is detected every 8 seconds during operation.	Refer to the characteristics of the room temperature thermistor (10-7.2,3.).
2-time flash 2.5-second OFF	Indoor coil thermistor	The indoor coil thermistor short or open circuit is detected every 8 seconds during operation.	Refer to the characteristics of the indoor coil thermistor (10-7.2,3.).
3-time flash 2.5-second OFF	Serial signal	The serial signal from outdoor unit is not received for a maximum of 6 minutes.	Refer to 10-6.© "How to check miswiring and serial signal error".
11-time flash 2.5-second OFF	Indoor fan motor	The rotational frequency feedback signal is not emitted during the 12 seconds the indoor fan operation.	Refer to 10-6.Ⓐ "Check of indoor fan motor".
12-time flash 2.5-second OFF	Indoor control system	It cannot properly read data in the nonvolatile memory of the indoor electronic control P.C. board.	Replace the indoor electronic control P.C. board.

NOTE: Blinking patterns of this mode differ from the ones of TROUBLESHOOTING CHECK TABLE (10-4.).

10-3. INSTRUCTION OF TROUBLESHOOTING

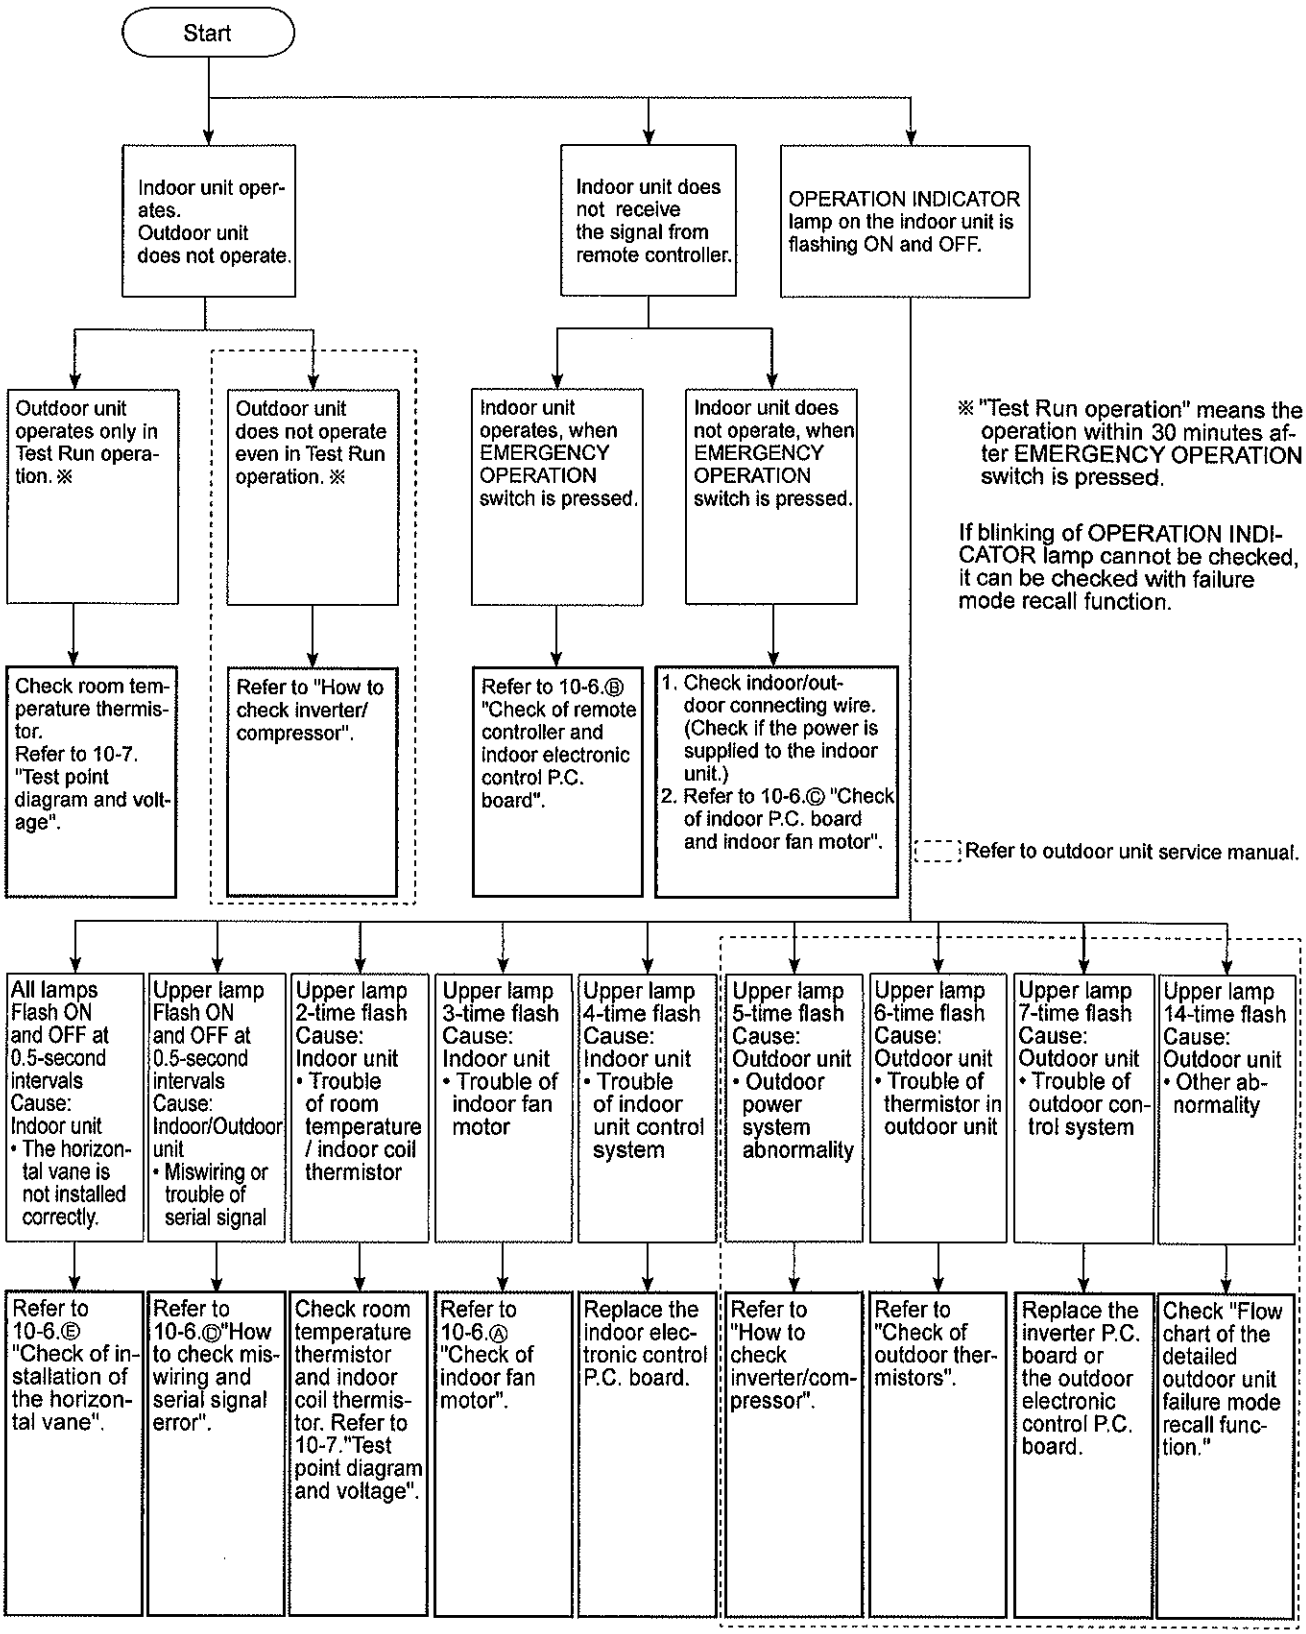

10-4. TROUBLESHOOTING CHECK TABLE

Before taking measures, make sure that the symptom reappears for accurate troubleshooting.
When the indoor unit has started operation and detected an abnormality of the following condition (the first detection after the power ON), the indoor fan motor turns OFF and OPERATION INDICATOR lamp flashes.

OPERATION INDICATOR

☼ ✸ Lighted
○ ☼ Blinking
○ Not lighted

No.	Abnormal point	Operation indicator lamp	Symptom	Condition	Correspondence
1	Miswiring or serial signal	Upper lamp flashes. 0.5-second ON ✸○✸○✸○✸○ 0.5-second OFF	Indoor unit and outdoor unit do not operate.	The serial signal from the outdoor unit is not received for 6 minutes.	• Refer to 10-6. Ⓓ "How to check miswiring and serial signal error".
2	Indoor coil thermistor Room temperature thermistor	Upper lamp flashes. 2-time flash ✸○✸○○○○○✸○✸○○ 2.5-second OFF		The indoor coil or the room temperature thermistor is short or open circuit.	• Refer to the characteristics of indoor coil thermistor, and the room temperature thermistor (10-7.2,3.).
3	Indoor fan motor	Upper lamp flashes. 3-time flash ✸○✸○✸○○○○○✸○✸○✸○○○ 2.5-second OFF		The rotational frequency feedback signal is not emitted during the indoor fan operation.	• Refer to 10-6. Ⓐ "Check of indoor fan motor".
4	Indoor control system	Upper lamp flashes. 4-time flash ✸○✸○✸○✸○○○○○✸○✸○✸○✸ 2.5-second OFF		It cannot properly read data in the nonvolatile memory of the indoor electronic control P.C. board.	• Replace the indoor electronic control P.C. board.
5	Outdoor power system	Upper lamp flashes. 5-time flash ✸○✸○✸○✸○✸○○○○○✸○✸○ 2.5-second OFF		It consecutively occurs 3 times that the compressor stops for overcurrent protection or start-up failure protection within 1 minute after start-up.	• Refer to "How to check of inverter/compressor". Refer to outdoor unit service manual • Check the stop valve.
6	Outdoor thermistors	Upper lamp flashes. 6-time flash ✸○✸○✸○✸○✸○✸○○○○○✸○ 2.5-second OFF		The outdoor thermistors short or open circuit during the compressor operation.	• Refer to "Check of outdoor thermistor". Refer to outdoor unit service manual.
7	Outdoor control system	Upper lamp flashes. 7-time flash ✸○✸○✸○✸○✸○✸○✸○○○○○✸ 2.5-second OFF		It cannot properly read data in the nonvolatile memory of the inverter P.C. board or the outdoor electronic control P.C. board.	• Replace the inverter P.C. board or the outdoor electronic control P.C. board. Refer to outdoor unit service manual.
8	Other abnormality	Upper lamp flashes. 14-time flash ✸○✸○✸○✸○✸○✸○✸○✸○✸○✸○✸○✸○ ○✸○✸○✸○✸○○○○○✸ 2.5-second OFF		An abnormality other than above mentioned is detected.	• Check the stop valve. • Confirm the abnormality in detail using the failure mode recall function for outdoor unit.
9	Outdoor control system	Upper lamp lights up ✸	Outdoor unit does not operate	It cannot properly read data in the nonvolatile memory of the inverter P.C. board or the outdoor electronic control P.C. board.	• Check the blinking pattern of the LED on the inverter P.C. board or the outdoor electronic control P.C. board.



OPERATION INDICATOR

☼
☼

No.	Abnormal point	Operation indicator lamp	Symptom	Condition	Correspondence
1	Attachment of the horizontal vane	All lamps flash at the same time. 0.5-second ON ☼○☼○☼○☼○ 0.5-second OFF	Indoor unit and outdoor unit do not operate.	The electricity is not conducted to the interlock switch (Fan) of the horizontal vane.	• Refer to 10-6. Ⓔ "Check of installation of the horizontal vane".

10-5. TROUBLE CRITERION OF MAIN PARTS

MSY-GE10VA MSY-GE13VA MSY-GE15VA MSY-GE18VA MSY-GE24VA MSY-GE26VA

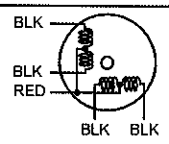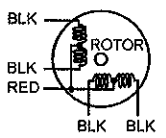
Part name	Check method and criterion	Figure
Room temperature thermistor (RT11) Indoor coil thermistor (RT12, RT13)	Measure the resistance with a tester. Refer to 10-7. "Test point diagram and voltage", "2 or 3. Indoor electronic control P.C. board", for the chart of thermistor.	
Indoor fan motor (MF)	Check 10-6.Ⓐ	
MSY-GE10VA MSY-GE13VA MSY-GE15VA MSY-GE18VA Vane motor (MV)	Measure the resistance between the terminals with a tester. (Temperature: 10 - 30°C) Color of the lead wire: RED - BLK Normal: 223 - 268 Ω	
MSY-GE24VA MSY-GE26VA Horizontal vane motor (MV1) Vertical vane motor (MV2)	Measure the resistance between the terminals with a tester. (Temperature: 10 - 30°C) Horizontal vane motor (MV1): RED-BLK: 313 ~ 375 Ω Vertical vane motor (MV2): RED-BLK: 268 ~ 322 Ω	

10-6. TROUBLESHOOTING FLOW


Ⓐ Check of indoor fan motor

MSY-GE10VA MSY-GE13VA MSY-GE15VA MSY-GE18VA

The indoor fan motor error has occurred, and the indoor fan does not operate.

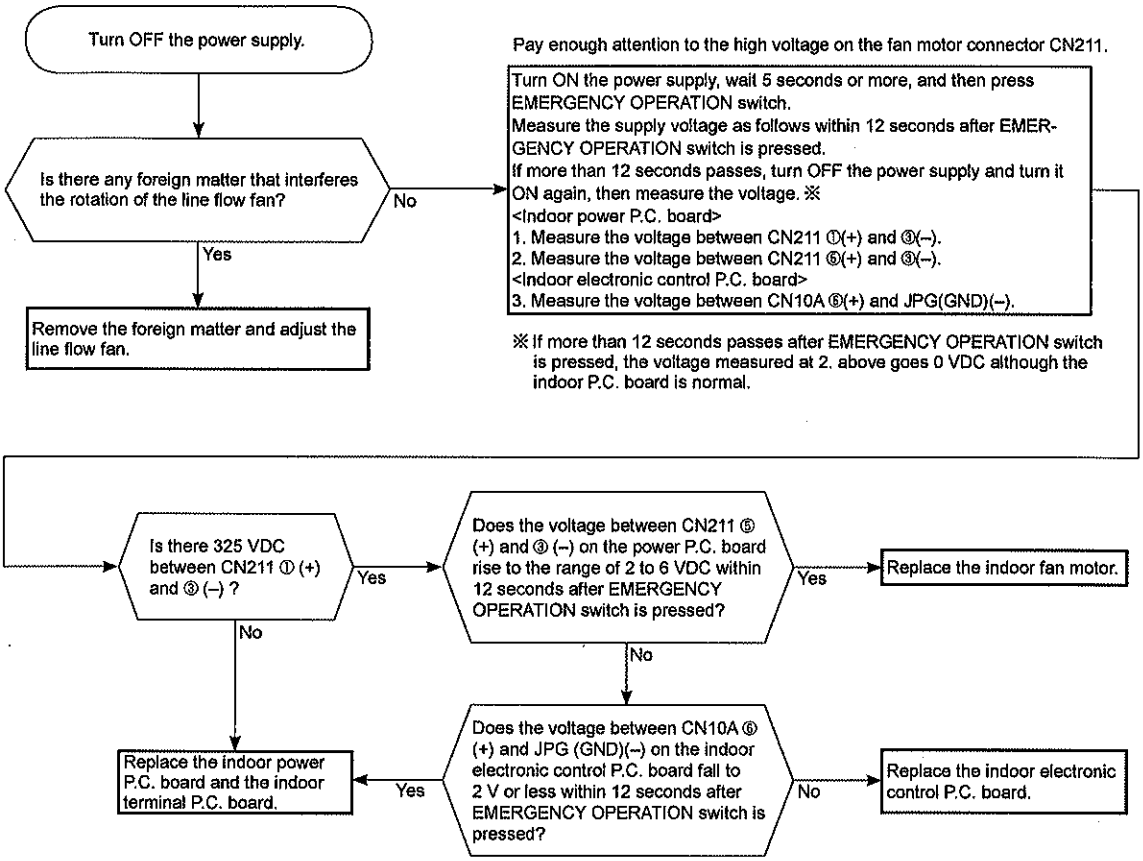


The indoor fan motor error has occurred, and the indoor fan repeats "12-second ON and 30-second OFF" 3 times, and then stops.

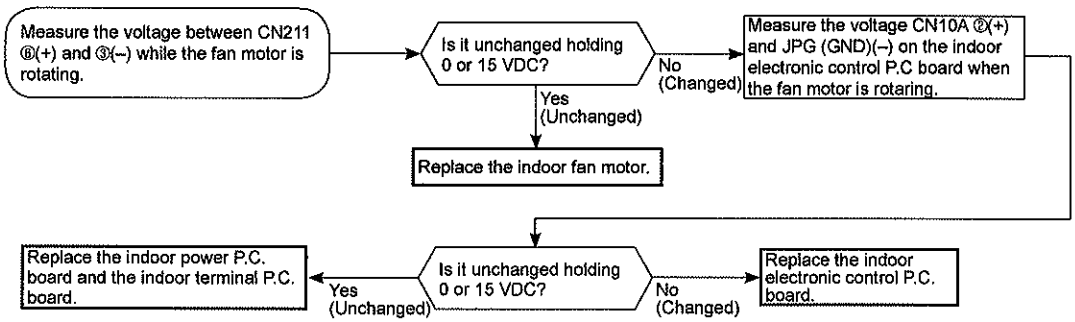


MSY-GE24VA MSY-GE26VA

The indoor fan motor error has occurred, and the indoor fan does not operate.

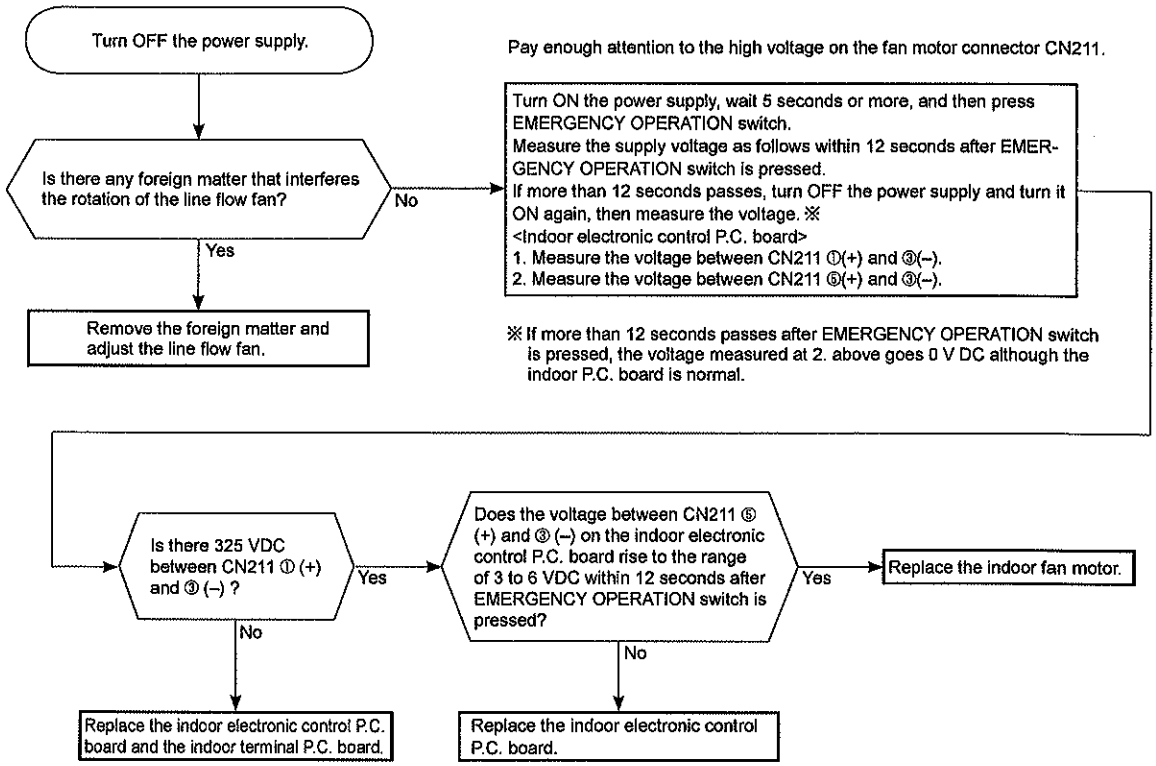


The indoor fan motor error has occurred, and the indoor fan repeats "12-second ON and 30-second OFF" 3 times, and then stops.

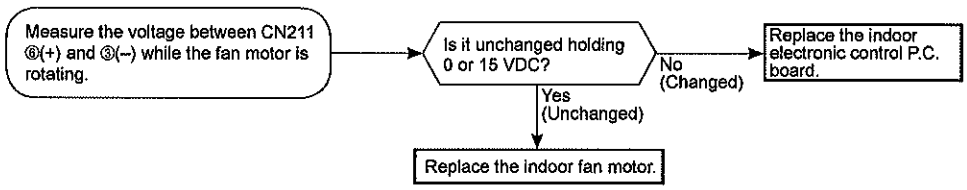


Ⓑ Check of remote controller and indoor electronic control P.C. board

※Check if the remote controller is exclusive for this air conditioner.

MSY-GE10VA MSY-GE13VA MSY-GE15VA MSY-GE18VA

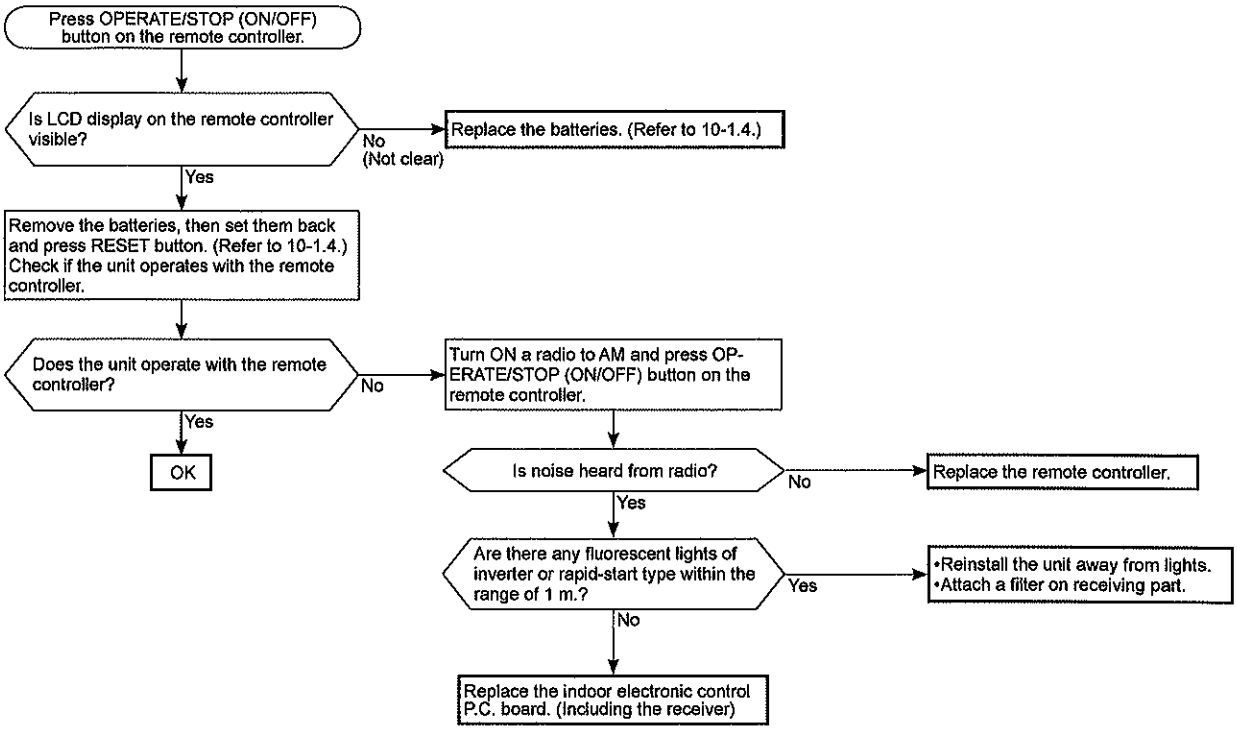


MSY-GE24VA MSY-GE26VA

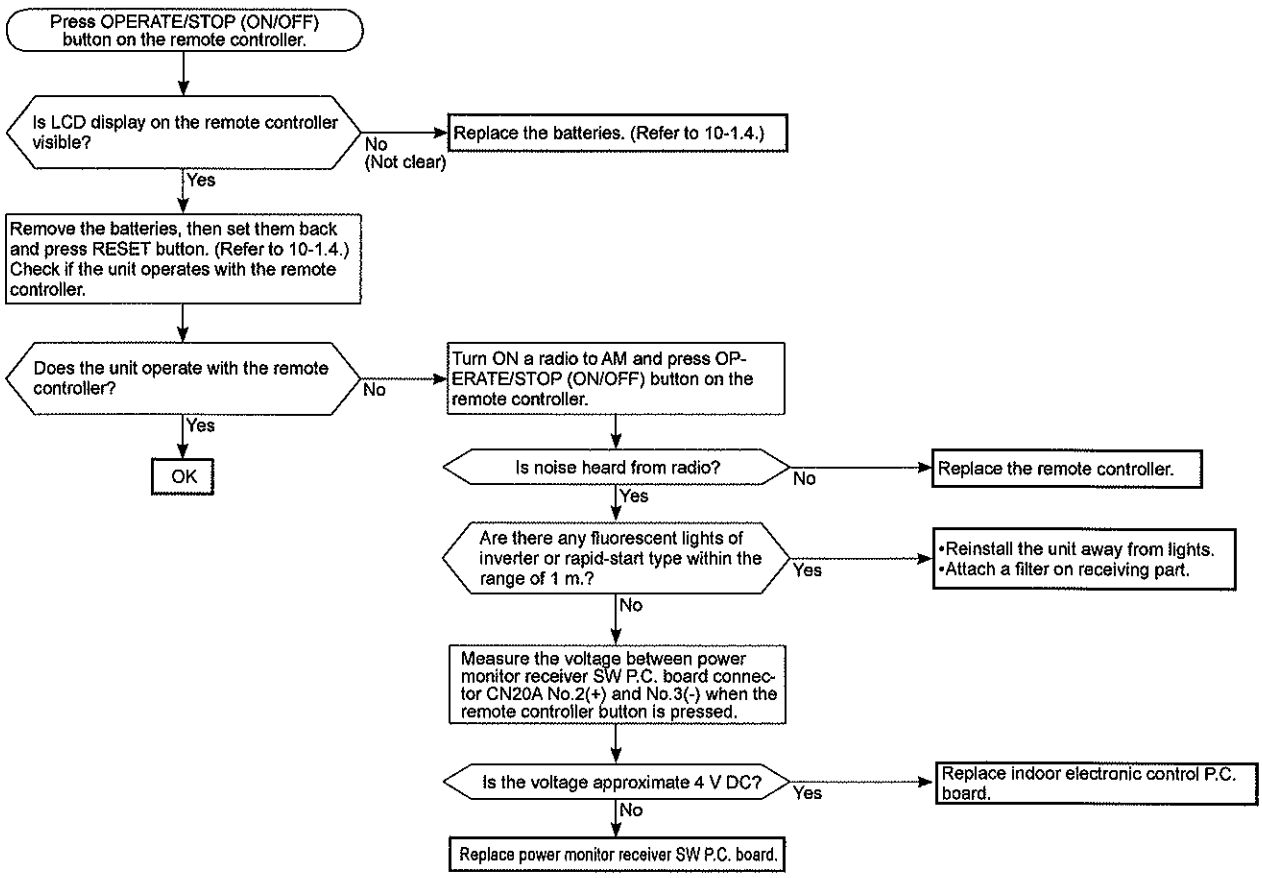



© Check of indoor P.C. board and indoor fan motor

MSY-GE10VA MSY-GE13VA MSY-GE15VA MSY-GE18VA

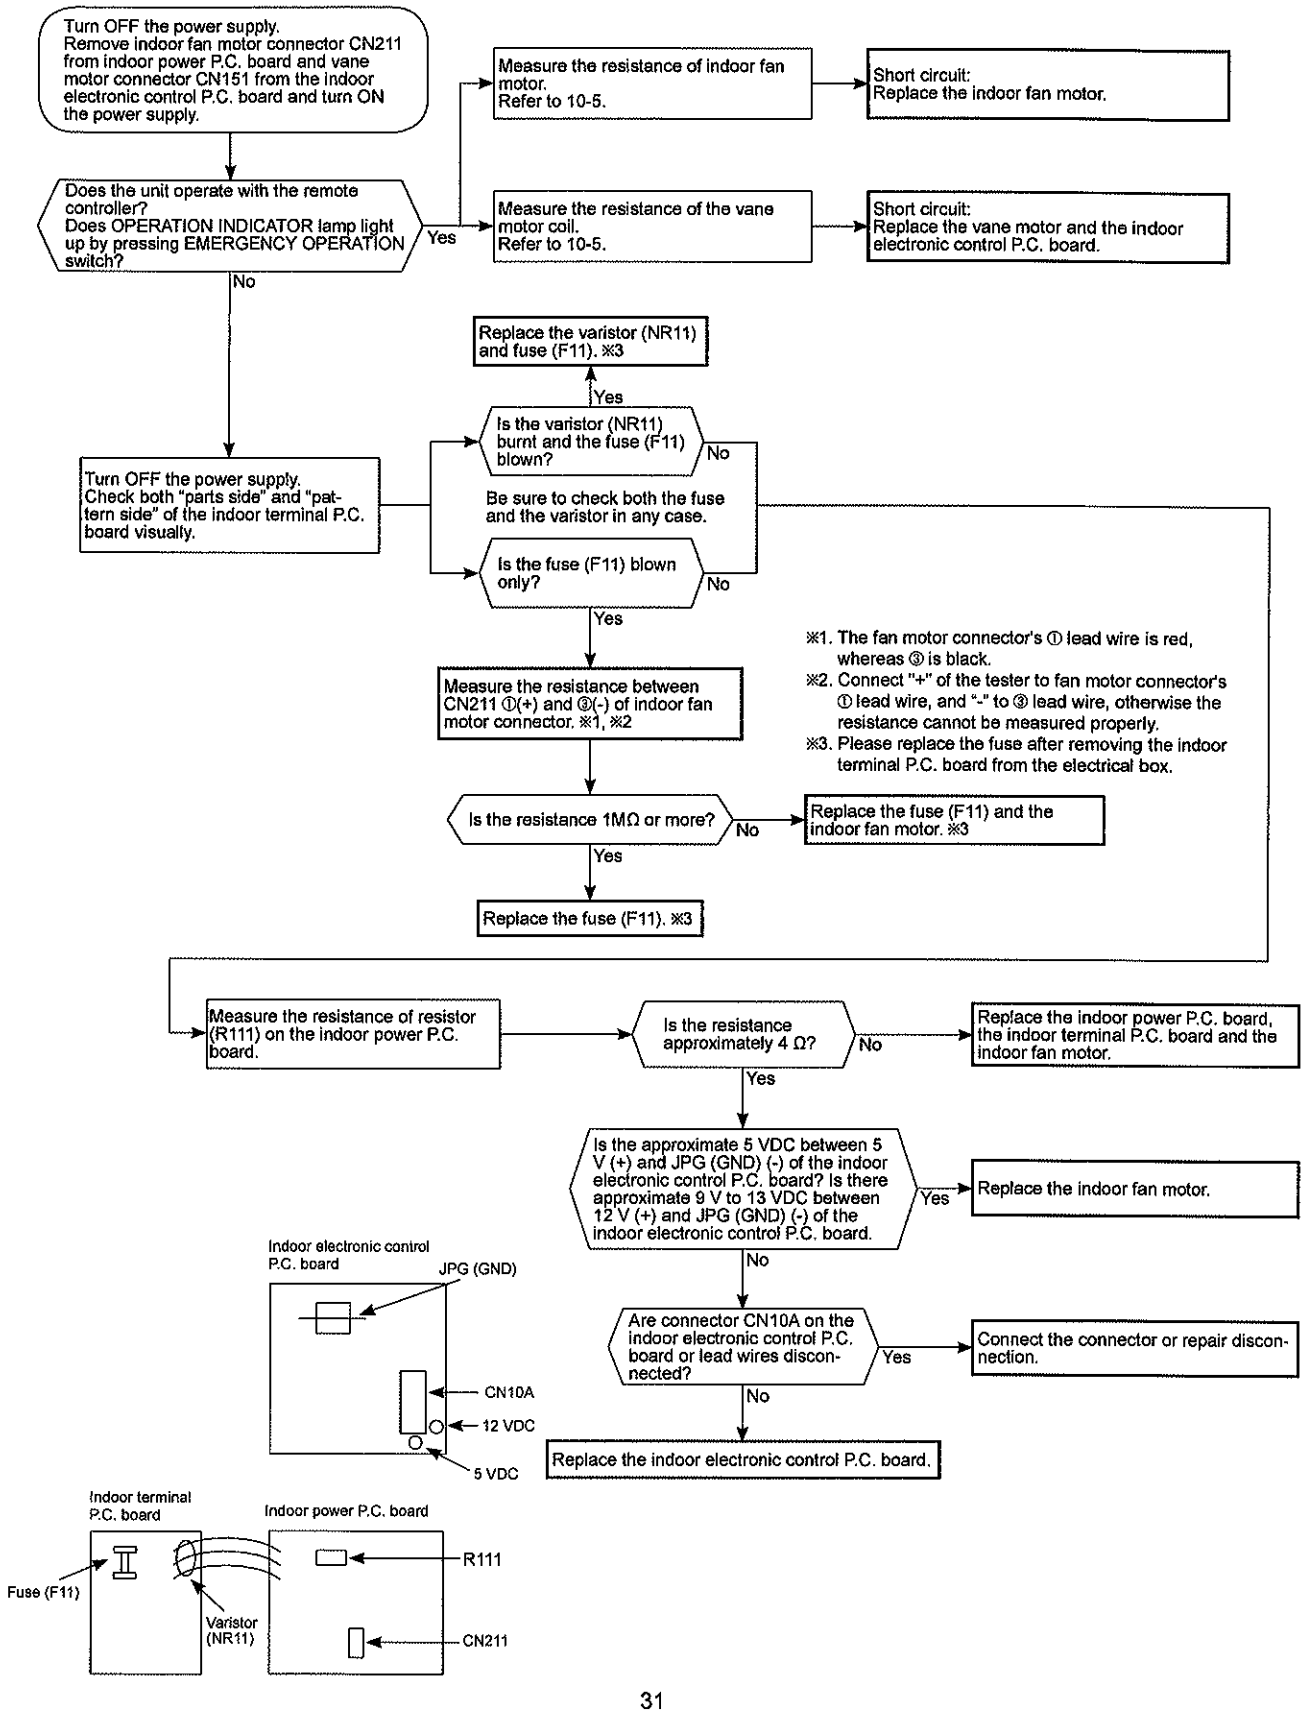


MSY-GE24VA MSY-GE26VA

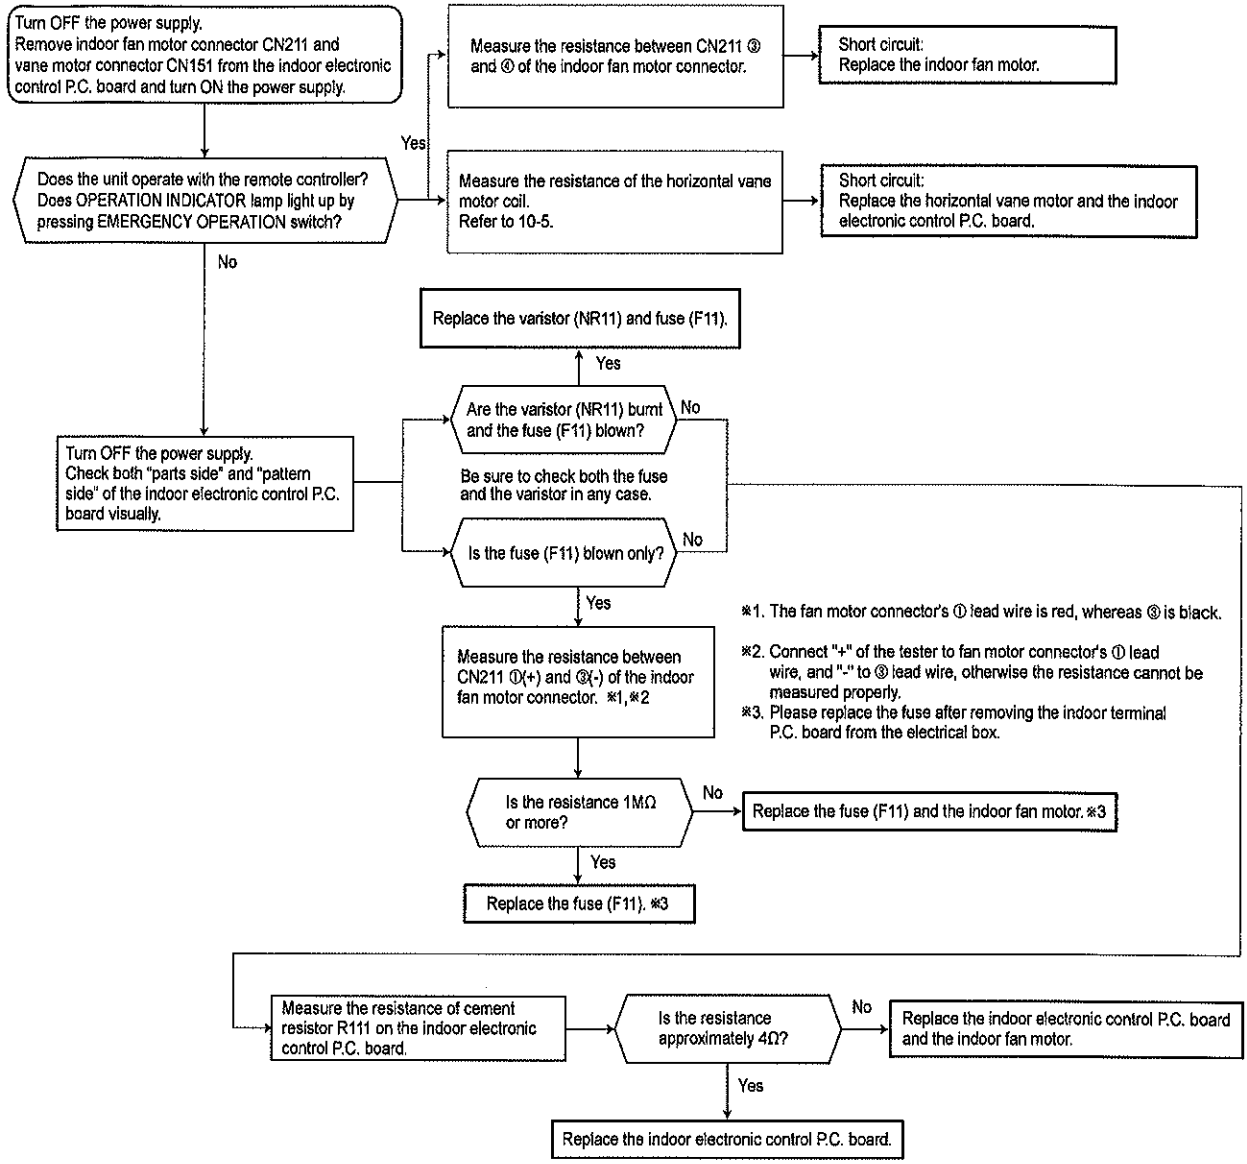

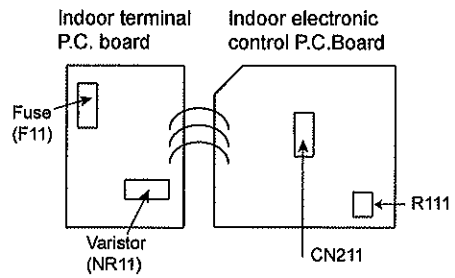


Ⓓ How to check miswiring and serial signal error


MSY-GE10VA MSY-GE13VA MSY-GE15VA MSY-GE18VA

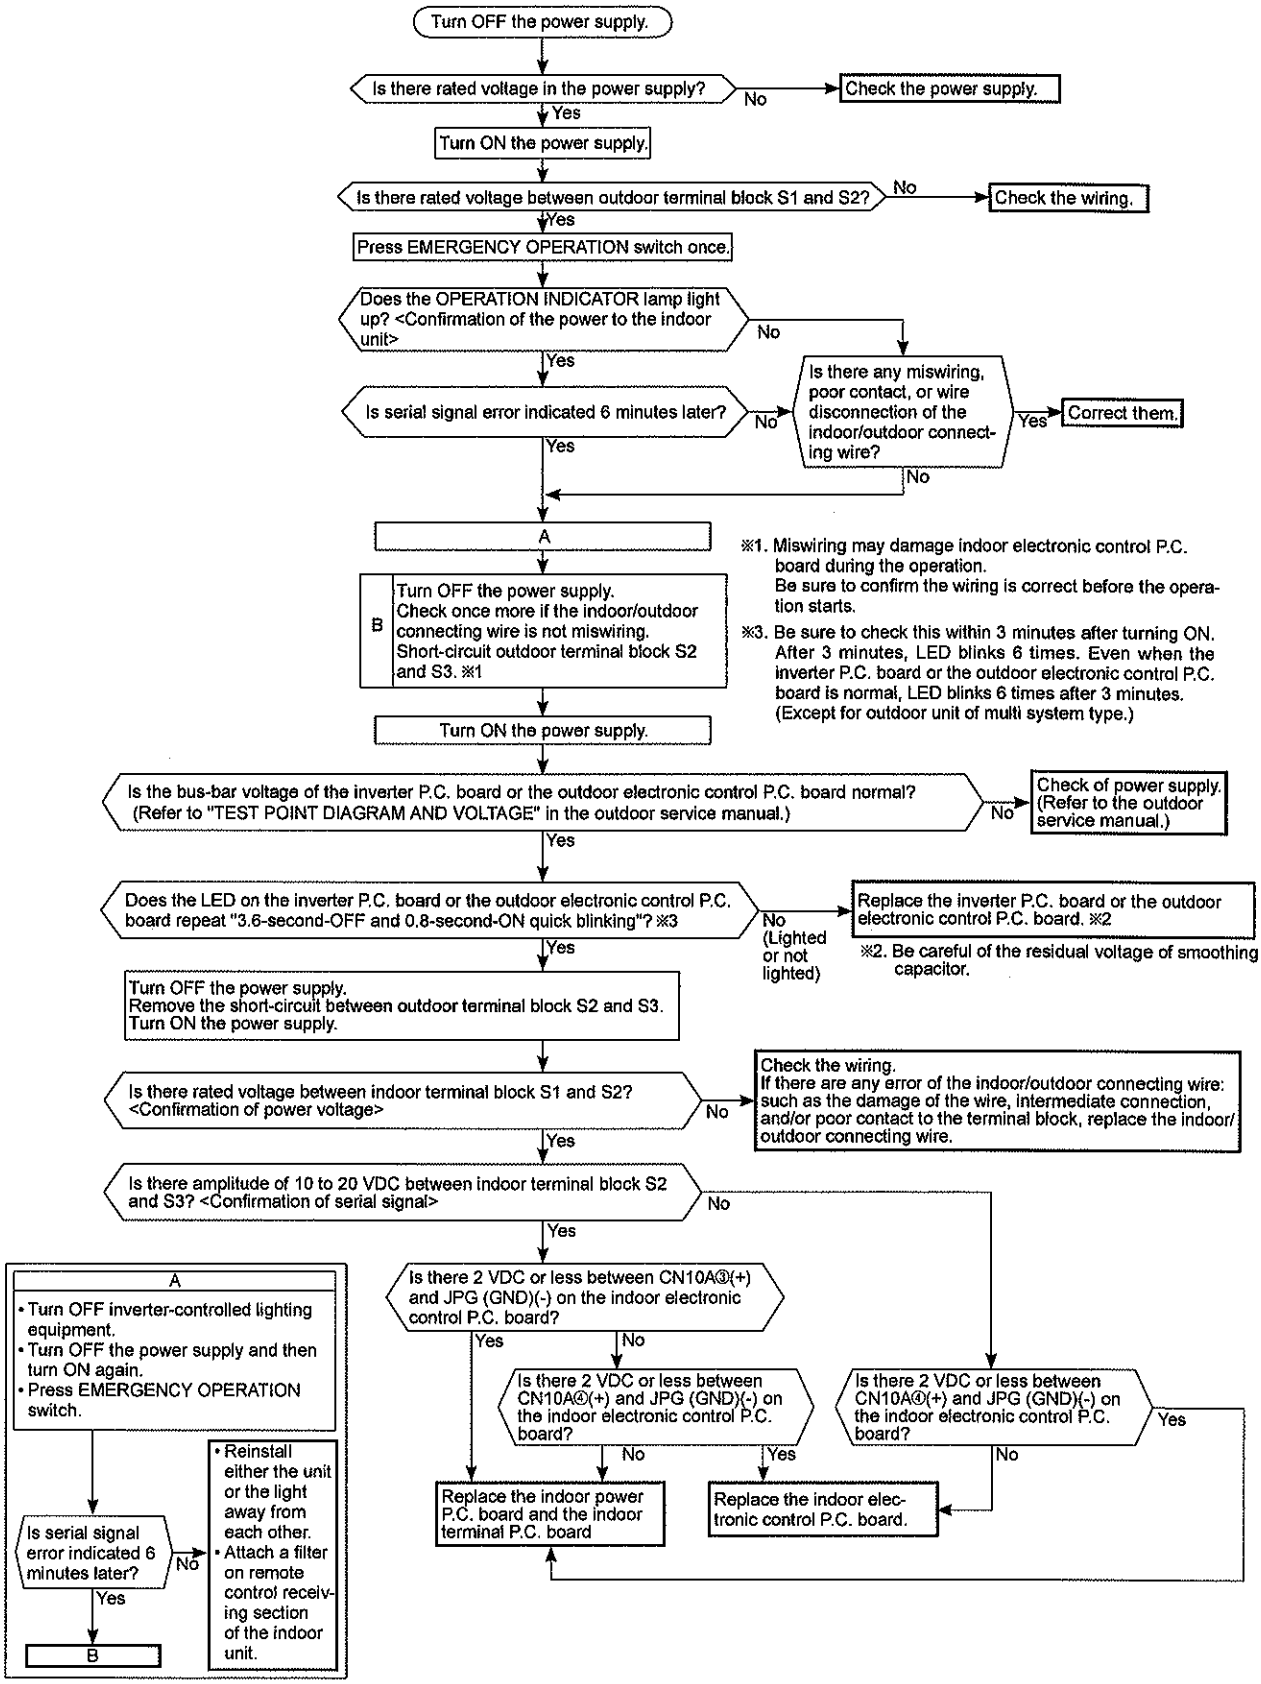


MSY-GE24VA MSY-GE26VA

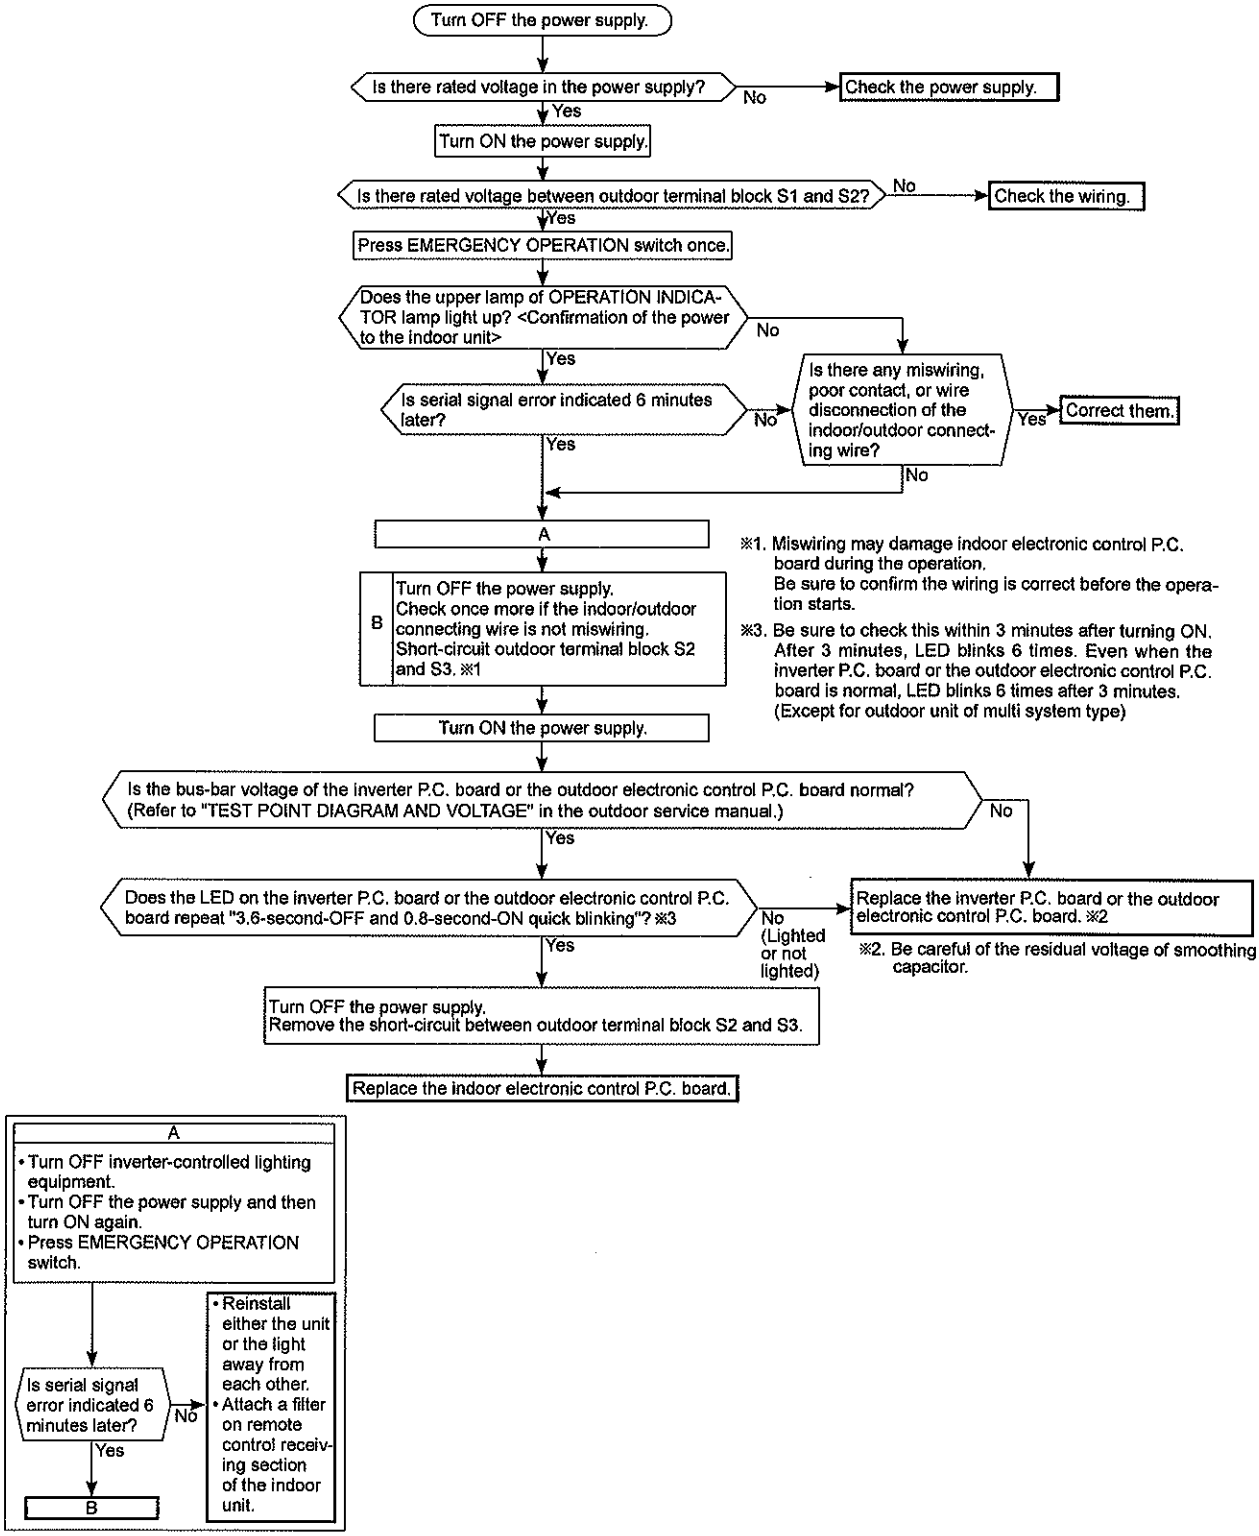

Ⓔ Check of installation of the horizontal vane

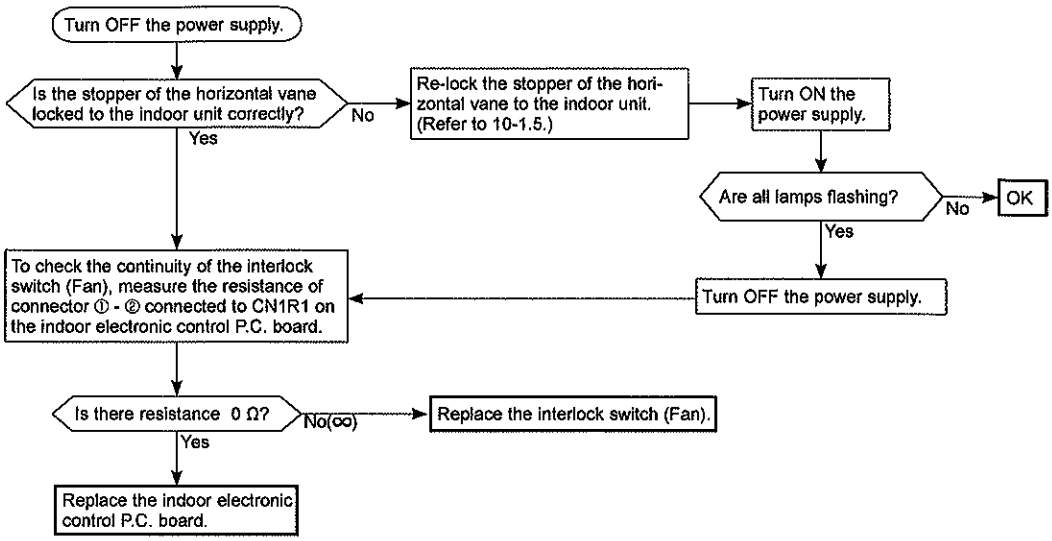

Ⓕ Electromagnetic noise enters into TV sets or radios

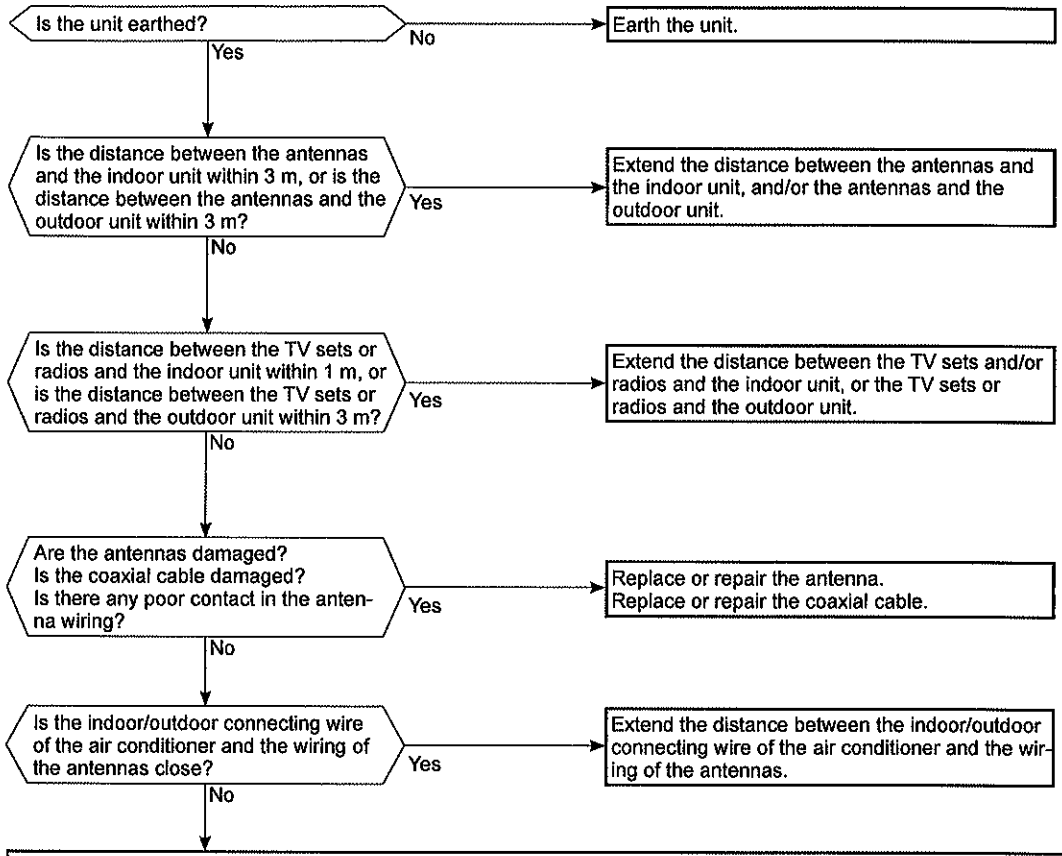

Even if all of the above conditions are fulfilled, the electromagnetic noise may enter, depending on the electric field strength or the installation condition (combination of specific conditions such as antennas or wiring).
Check the following before asking for service.


1. Devices affected by the electromagnetic noise
   TV sets, radios (FM/AM broadcast, shortwave)
2. Channel, frequency, broadcast station affected by the electromagnetic noise
3. Channel, frequency, broadcast station unaffected by the electromagnetic noise
4. Layout of:
   indoor/outdoor unit of the air conditioner, indoor/outdoor wiring, earth wire, antennas, wiring from antennas, receiver
5. Electric field intensity of the broadcast station affected by the electromagnetic noise
6. Presence or absence of amplifier such as booster
7. Operation condition of air conditioner when the electromagnetic noise enters in
   1) Turn OFF the power supply once, and then turn ON the power supply. In this situation, check for the electromagnetic noise.
   2) Within 3 minutes after turning ON the power supply, press OPERATE/STOP (ON/OFF) button on the remote controller for power ON, and check for the electromagnetic noise.
   3) After a short time (3 minutes later after turning ON), the outdoor unit starts running. During operation, check for the electromagnetic noise.
   4) Press OPERATE/STOP (ON/OFF) button on the remote controller for power OFF, when the outdoor unit stops but the indoor/outdoor communication still runs on. In this situation, check for the electromagnetic noise.

10-7. TEST POINT DIAGRAM AND VOLTAGE

1. Indoor power P.C. board, Indoor terminal P.C. board

MSY-GE10VA MSY-GE13VA MSY-GE15VA MSY-GE18VA

Indoor terminal P.C. board **Indoor power P.C. board**

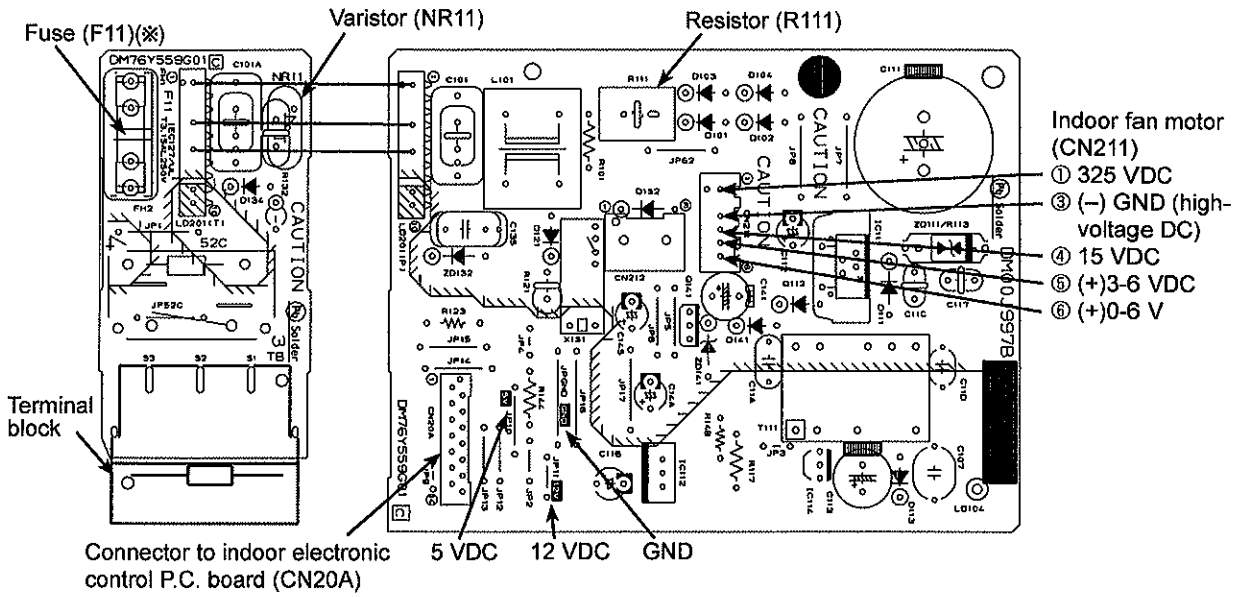



※ Please replace the fuse after removing the indoor terminal P.C. board from the electrical box.

2. Indoor electronic control P.C. board

MSY-GE10VA MSY-GE13VA MSY-GE15VA MSY-GE18VA

Indoor electronic control P.C. board

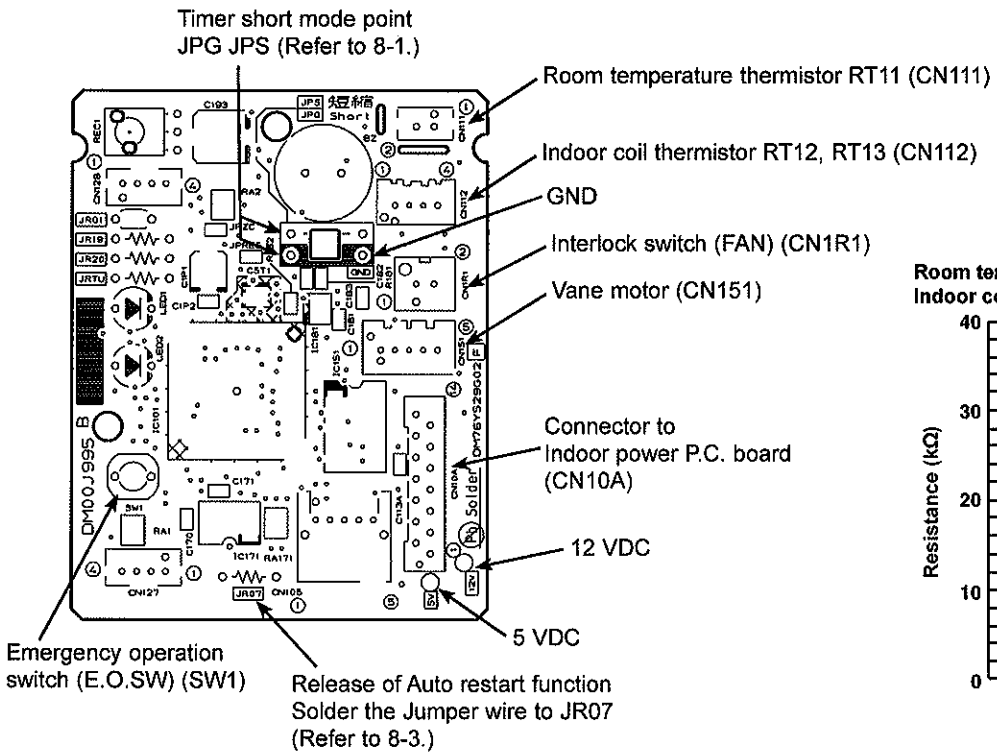


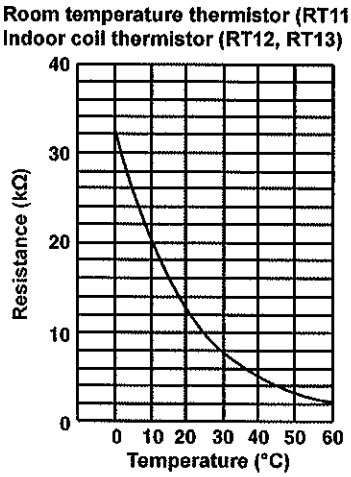

3. Indoor electronic control P.C. board, Indoor terminal P.C. board, Power monitor receiver SW P.C. board


MSY-GE24VA MSY-GE26VA

Indoor terminal P.C. board **Indoor electronic control P.C. board**

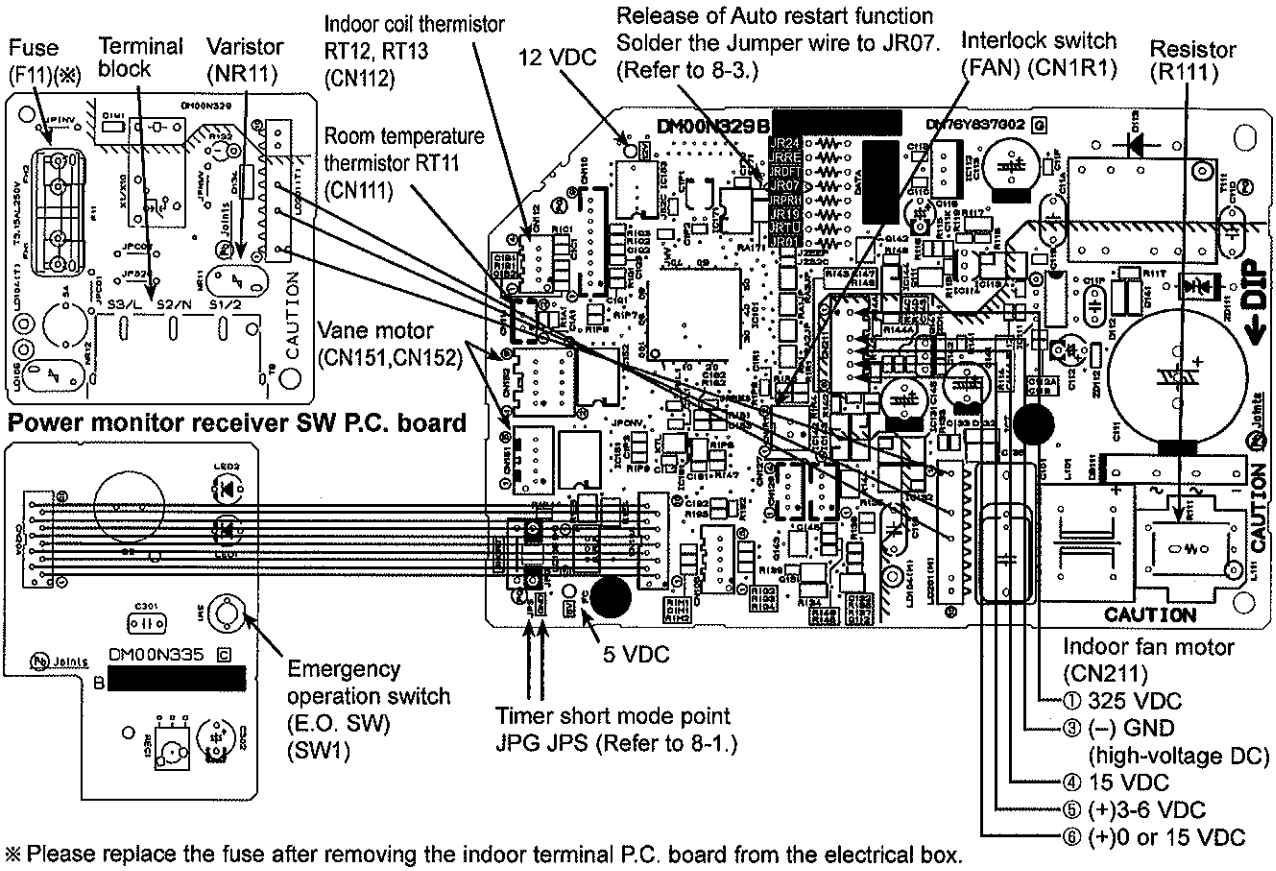

※ Please replace the fuse after removing the indoor terminal P.C. board from the electrical box.

Room temperature thermistor (RT11)
Indoor coil thermistor (RT12, RT13)

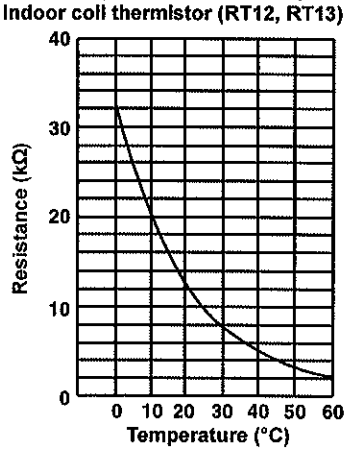


11 DISASSEMBLY INSTRUCTIONS

<"Terminal with locking mechanism" Detaching points>


The terminal which has the locking mechanism can be detached as shown below.
There are two types (refer to (1) and (2)) of the terminal with locking mechanism.
The terminal without locking mechanism can be detached by pulling it out.
Check the shape of the terminal before detaching.

(1) Slide the sleeve and check if there is a locking lever or not.

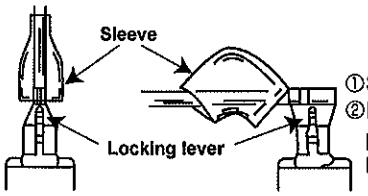

①Slide the sleeve.
②Pull the terminal while pushing the locking lever.


(2) The terminal with this connector has the locking mechanism.


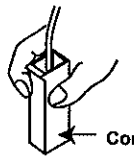




①Hold the sleeve, and pull out the terminal slowly.





11-1. MSY-GE10VA MSY-GE13VA MSY-GE15VA MSY-GE18VA

NOTE: Turn OFF power supply before disassembly.

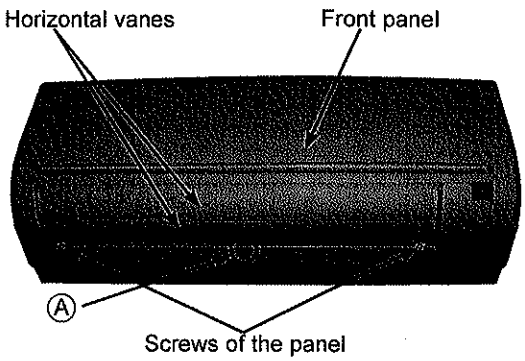OPERATING PROCEDURE	PHOTOS
1. Removing the panel (1) Remove the horizontal vanes. (2) Remove the screw caps of the panel. Remove the screws of the panel. (3) Unhook the lower part (Ⓐ) of the panel. (4) Hold the lower part of both ends of the panel and pull it slightly toward you, and then remove the panel by pushing it upward.	**Photo 1** 

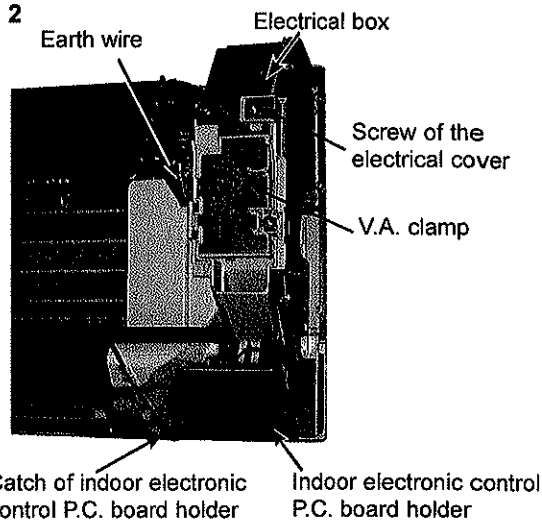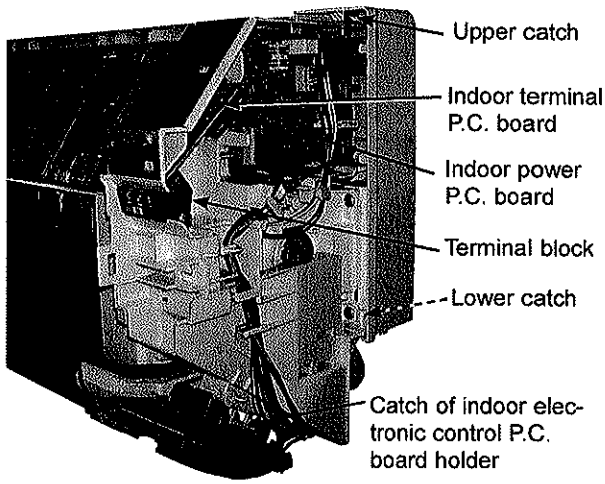
OPERATING PROCEDURE	PHOTOS
2. Removing the indoor electronic control P.C. board and the room temperature thermistor (1) Remove the panel (Refer to 1.) and the corner box. (2) Remove the screw of the V.A. clamp. Remove the V.A. clamp and the indoor/outdoor connecting wire. (3) Open the indoor electronic control P.C. board holder (to right side). (4) Disconnect the following connectors: <Indoor electronic control P.C. board> CN112 (Indoor coil thermistor) CN151 (Vane motor) CN1R1 (Interlock switch) CN10A (To the indoor power P.C. board) (5) Unhook the catches of the indoor electronic control P.C. board holder from the nozzle and the electrical box (right side). (6) Remove the room temperature thermistor from the hook of the indoor electronic control P.C. board holder. (7) Open the back side of the indoor electronic control P.C. board holder, and remove the indoor electronic control P.C. board. (8) Remove the room temperature thermistor from the indoor electronic control P.C. board.	**Photo 2** 
3. Remove the indoor power P.C. board, the indoor terminal P.C. board, and the electrical box (1) Remove the panel (Refer to 1.) and the corner box. (2) Remove the indoor/outdoor connecting wire. (Refer to 2.) (3) Remove the earth wire connected to the indoor heat exchanger from the electrical box. (4) Unhook first the lower, then the upper catches of the electrical box, and pull out the electrical box. (5) Remove the screw of the electrical cover and remove the electrical cover. (6) Disconnect all the connectors on the indoor power P.C. board and unhook all lead wires. (7) Remove the screw of terminal block on the indoor terminal P.C. board. (8) Remove the indoor power P.C. board and the indoor terminal P.C. board.	**Photo 3** 

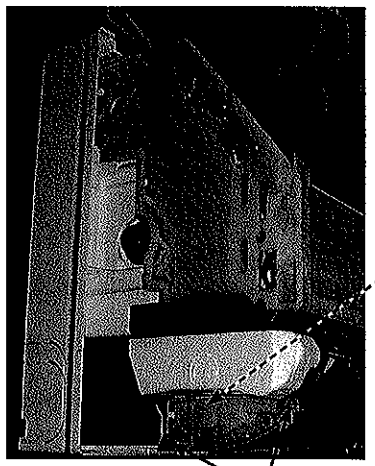
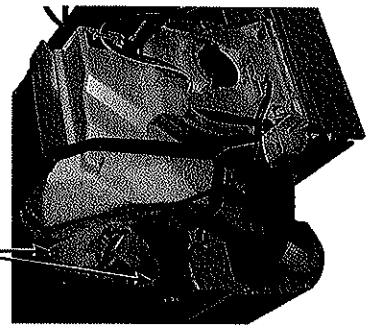
OPERATING PROCEDURE	PHOTOS
4. Removing the nozzle assembly (1) Remove the panel (Refer to 1.) and the corner box. (2) Remove the indoor/outdoor connecting wire. (Refer to 2.) (3) Remove the indoor electronic control P.C. board holder (4) Disconnect the following connectors: <Indoor electronic control P.C. board> CN1R1 (Interlock switch) (5) Pull out the drain hose from the nozzle assembly and remove the nozzle assembly. (6) Remove the interlock switch.	**Photo 4** 
5. Removing the horizontal vane motor (1) Remove the nozzle assembly. (Refer to 4.) (2) Remove the screws of the horizontal vane motor unit. (3) Disconnect the connector from the horizontal vane motor. (4) Remove the screws of the horizontal vane motor. (5) Remove the horizontal vane motor from the horizontal vane motor unit.	**Photo 5** 

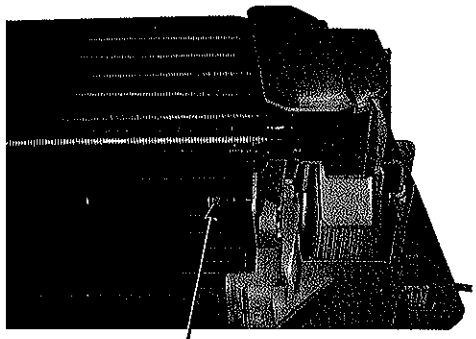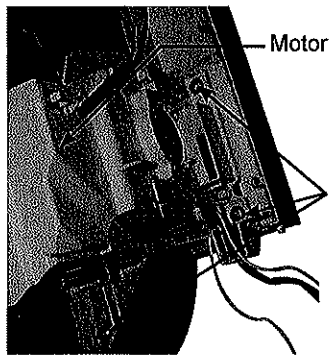
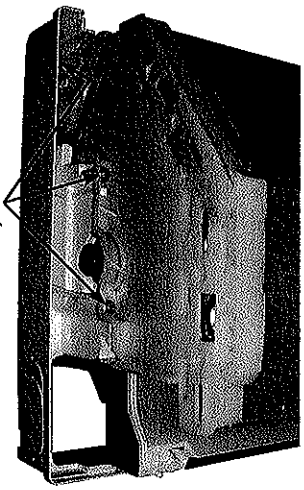
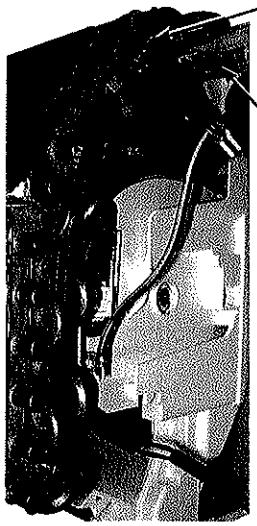
OPERATING PROCEDURE	PHOTOS
6. Removing the indoor fan motor, the indoor coil thermistor, and the line flow fan (1) Remove the panel (Refer to 1.) and the corner box. (2) Remove the indoor electronic control P.C. board holder, the electrical box and the nozzle assembly. (3) Remove the screws fixing the motor bed. (4) Loosen the screw fixing the line flow fan. (5) Remove the motor bed together with fan motor and motor band. (6) Release the hooks of the motor band. Remove the motor band. Pull out the indoor fan motor. (8) Remove the indoor coil thermistor from the heat exchanger. ※ Install the indoor coil thermistor in its former position when assembling it. (Photo 9) (9) Remove the screws fixing the left side of the heat exchanger. (10) Lift the heat exchanger, and pull out the line flow fan to the lower-left.	**Photo 6**  Screws of the line flow fan **Photo 7**  Motor band Screws of the motor bed **Photo 8**  Screws of the left side of the heat exchanger
Photo 9  Indoor coil thermistor(sub) RT13 Indoor coil thermistor(main) RT12	

11-2. MSY-GE24VA MSY-GE26VA

NOTE: Turn OFF power supply before disassembly.

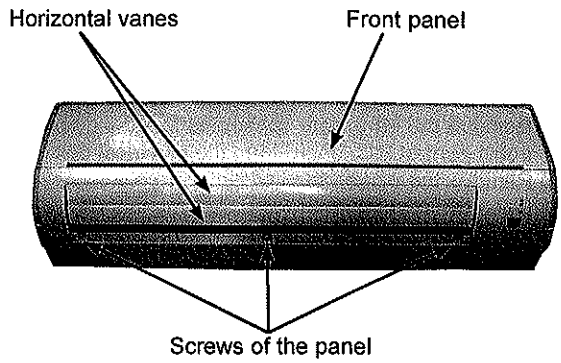OPERATING PROCEDURE	PHOTOS
1. Removing the panel (1) Remove the horizontal vanes. (2) Remove the screw caps of the panel. Remove the screws of the panel. (3) Hold the lower part of both ends of the panel and pull it slightly toward you, and then remove the panel by pushing it upward.	**Photo 1** 

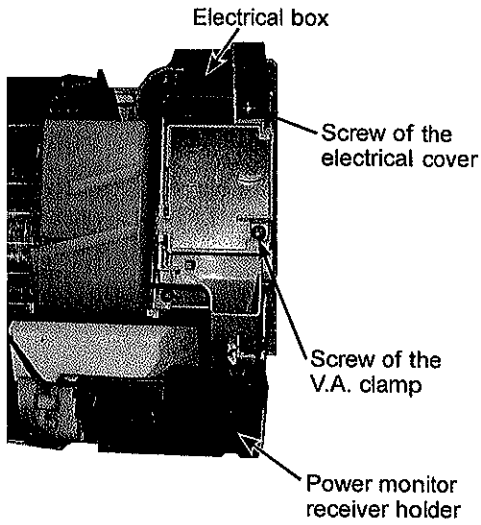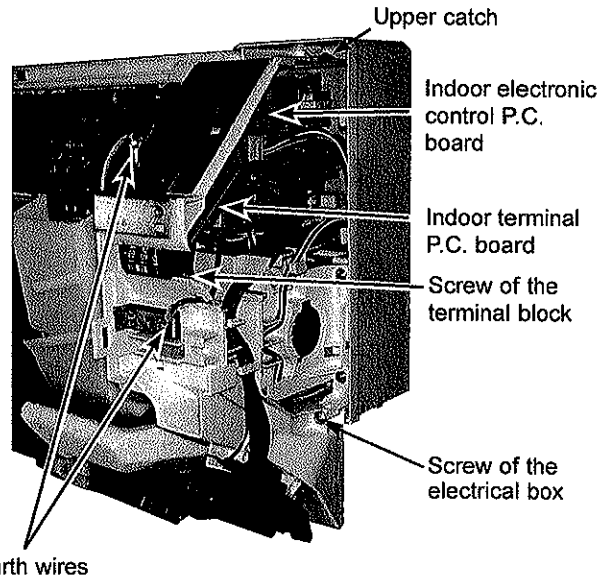OPERATING PROCEDURE	PHOTOS
2. Removing the indoor electronic control P.C. board, the power monitor receiver SW P.C. board and the indoor terminal P.C. board (1) Remove the panel (Refer to 1.) and the corner box. (2) Remove the screw of the V.A. clamp. Remove the V.A. clamp and the indoor/outdoor connecting wire. (3) Remove the screw of the electrical cover, and then the electrical cover. (4) Remove the earth wire connected to the indoor electronic control P.C. board from the electrical box. (5) Remove the power monitor receiver holder. (6) Open the rear cover of the power monitor receiver holder and pull out the power monitor receiver SW P.C. board. (7) Disconnect all the connectors on the indoor electronic control P.C. board and unhook all lead wires. (8) Remove the screw of the terminal block on the indoor terminal P.C. board. (9) Remove the indoor terminal P.C. board and the indoor electronic control P.C. board.	**Photo 2** 
3. Removing the indoor electrical box (1) Remove the panel (Refer to 1.) and the corner box. (2) Remove the indoor/outdoor connecting wire. (Refer to 2.) (3) Remove the earth wire connected to the indoor heat exchanger from the electrical box. (4) Remove the screw of the electrical cover and remove the electrical cover. (5) Disconnect all the connectors on the indoor electronic control P.C. board and unhook all lead wires. (6) Remove the screw fixing the electrical box, then the upper catch of the electrical box, and pull out the electrical box.	**Photo 3** 

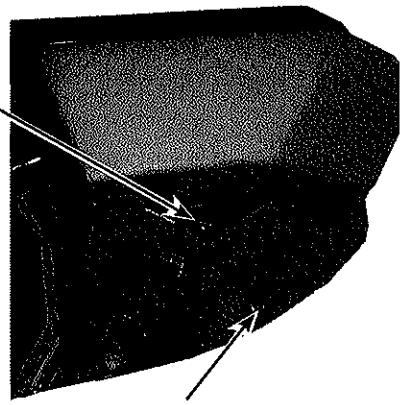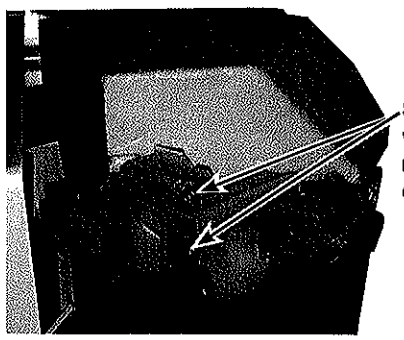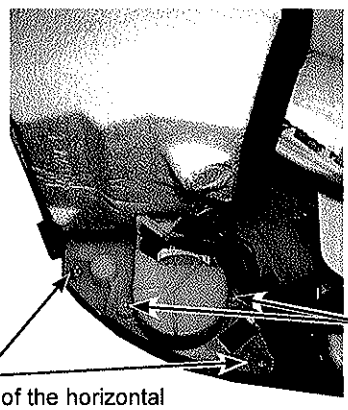
OPERATING PROCEDURE	PHOTOS
4. Removing the nozzle assembly (1) Remove the panel (Refer to 1.) and the corner box. (2) Remove the V.A. clamp, and then the indoor/outdoor connecting wire. (Photo 2) (3) Remove the electrical cover. (Photo 2) (4) Disconnect the following connectors on the electronic control P.C. board: CN151 (Horizontal vane motor) CN152 (Vertical vane motor) CN1R1 (Interlock switch) (5) Remove the power monitor receiver holder. (Photo 2) (6) Pull out the drain hose from the nozzle assembly and remove the nozzle assembly. (7) Remove the vane motors. (Refer to 5 and 6.) (8) Remove the interlock switch.	**Photo 4**  Screws of the vertical vane motor unit Screws of the interlock switch
5. Removing the vertical vane motor unit (1) Remove the nozzle assembly. (Refer to 4.) (2) Remove the crank of the vertical vane motor unit from the arm of the vertical vane. (3) Remove the screw of the vertical vane motor unit, and pull the vertical vane motor unit. (4) Remove the screws of the vertical vane motor unit cover. (5) Remove the crank of the vertical vane motor unit from the shaft of the vane motor. (6) Remove the vertical vane motor from the vertical vane motor unit. (7) Disconnect the connector of vertical vane motor from the vertical vane motor.	**Photo 5**  Screws of the vertical vane motor unit cover
6. Removing the horizontal vane motor (1) Remove the nozzle assembly. (Refer to 4.) (2) Remove the screws of the horizontal vane motor unit, and pull out the horizontal vane motor unit. (3) Disconnect the connector from the horizontal vane motor. (4) Remove the screws of the horizontal vane motor unit cover. (5) Remove the horizontal vane motor from the horizontal vane motor unit.	**Photo 6**  Screws of the horizontal vane motor unit Screws of the horizontal vane motor unit cover

OPERATING PROCEDURE

7. Removing the water cut, the indoor fan motor, the indoor coil thermistor, and the line flow fan

(1) Remove the panel (Refer to 1.) and the corner box.
(2) Remove the power monitor receiver holder, the electrical box and the nozzle assembly. (Refer to 3 and 4.)
(3) Remove the screw of the water cut and remove the water cut.
(4) Remove the screws fixing the motor bed.
(5) Loosen the screw fixing the line flow fan.
(6) Remove the motor bed together with fan motor and motor band.
(7) Remove the screw of the motor band.
(8) Release the hooks of the motor band. Remove the motor band. Pull out the indoor fan motor.
(9) Remove the indoor coil thermistor from the heat exchanger.
※Install the indoor coil thermistor in its former position when assembling it. (Photo 9)
(10) Remove the screws fixing the left side of the heat exchanger.
(11) Lift the heat exchanger, and pull out the line flow fan to the lower-left.

Photo 7

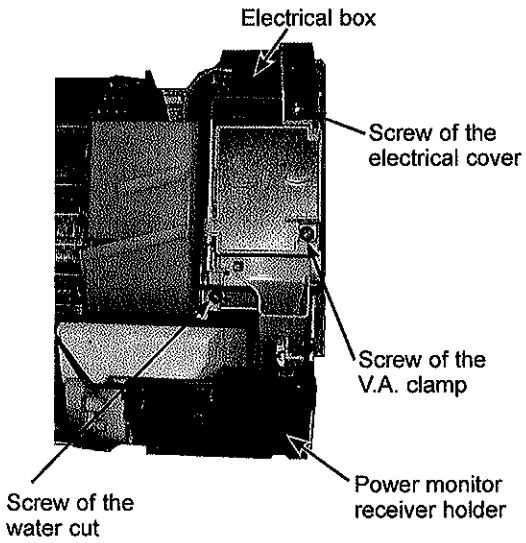

PHOTOS

Photo 8

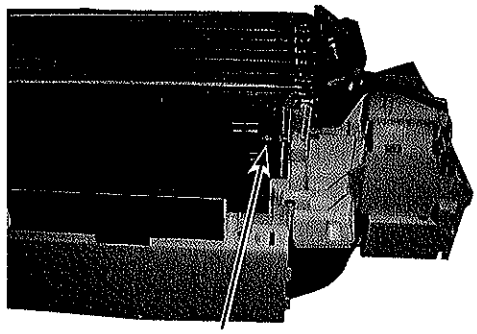


Photo 9


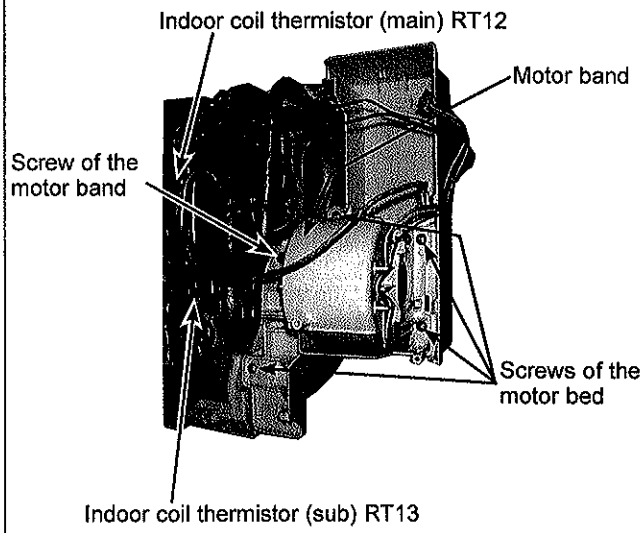


Photo 10

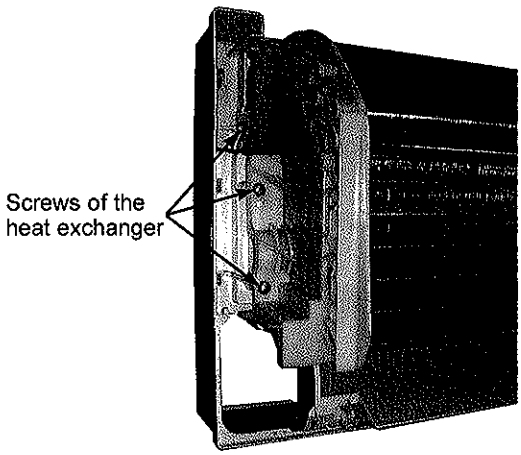

MITSUBISHI ELECTRIC CORPORATION
HEAD OFFICE: TOKYO BLDG., 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN

© Copyright 2009 MITSUBISHI ELECTRIC CO.,LTD
Distributed in Apr. 2011. No. OBH538 REVISED EDITION-C
Distributed in Jun. 2010. No. OBH538 REVISED EDITION-B 5
Distributed in Dec. 2009. No. OBH538 REVISED EDITION-A 5
Distributed in Mar. 2009. No. OBH538 4
Made in Japan

New publication, effective Apr. 2011
Specifications subject to change without notice.