
High Capacity Water Pressure Regulator

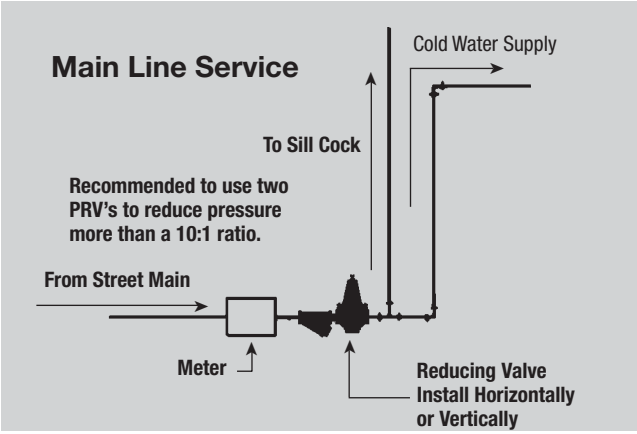


Installation Instructions

- Flush dirt and scale from supply pipe.
- You may install the regulator vertically or horizontally, but you must install it with the arrow in the direction of flow.
- To adjust, loosen locknut and turn adjusting screw clockwise to increase pressure; counterclockwise to decrease.

WARNING: Conduct a thorough inspection of the valve for external leaks after the "final" installation of the regulator.

Maintenance Instructions

- To clean or replace parts; shut off supply, loosen lock-nut and back off adjusting screw.
- Remove spring cage, spring, washer. Remove bottom plug.
- Disassemble module. Use wrench to loosen stem nut and remove lock washer and diaphragm plate. Remove yoke by loosening disc holder using a screw driver.
- When replacing disc holder, apply a drop of low strength thread lock. Do not over torque.

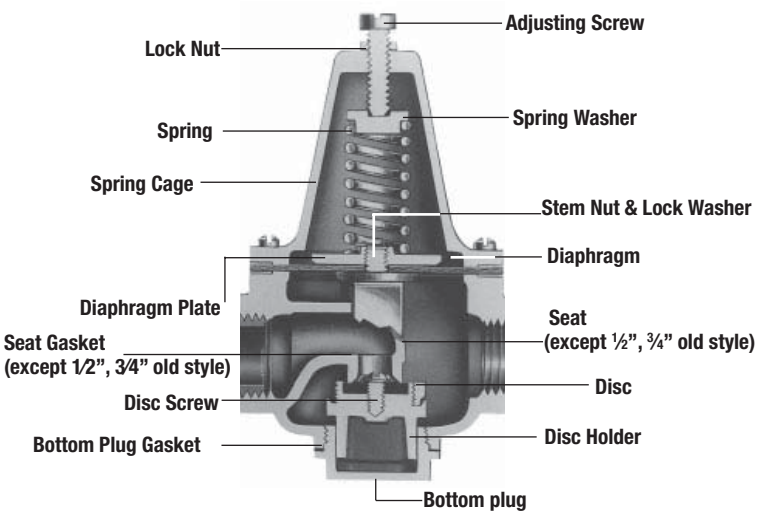

Part Number J0196A
Range 30-145 PSI